

# 2-17

2-20, 2-21, 2-22,  
2-23, 2-24

Низ / Bottom / Alapuoli



 
**RU** Инструкция по сборке

**EN** Assembly instruction

**FI** Koontaohje




1006  
**60**




1004  
**40**



 1038  
**46**



1008  
**28**

 

1096  
**60**



 
1097  
**44**



1028  
**16**



1040  
**8**

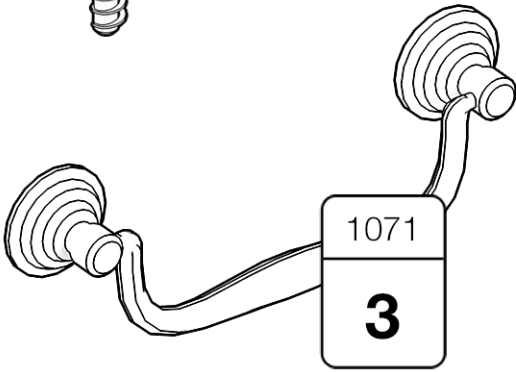


1071  
**3**




1010  
**8**



 
1013  
**14**

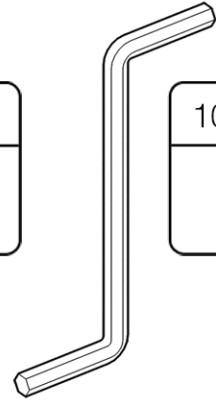


1034  
**1**

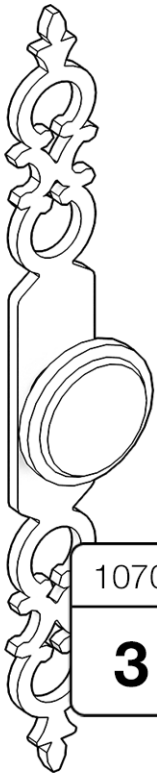 


1070  
**3**

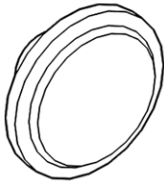 


1074  
**3**

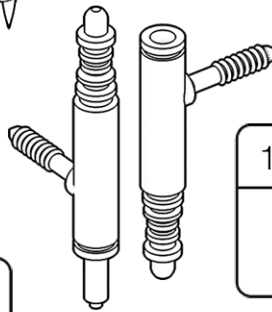 


1072  
**6**

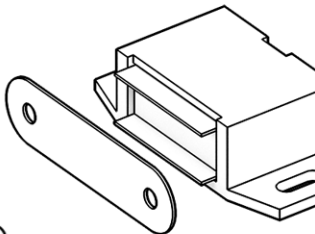 




1042  
**3**


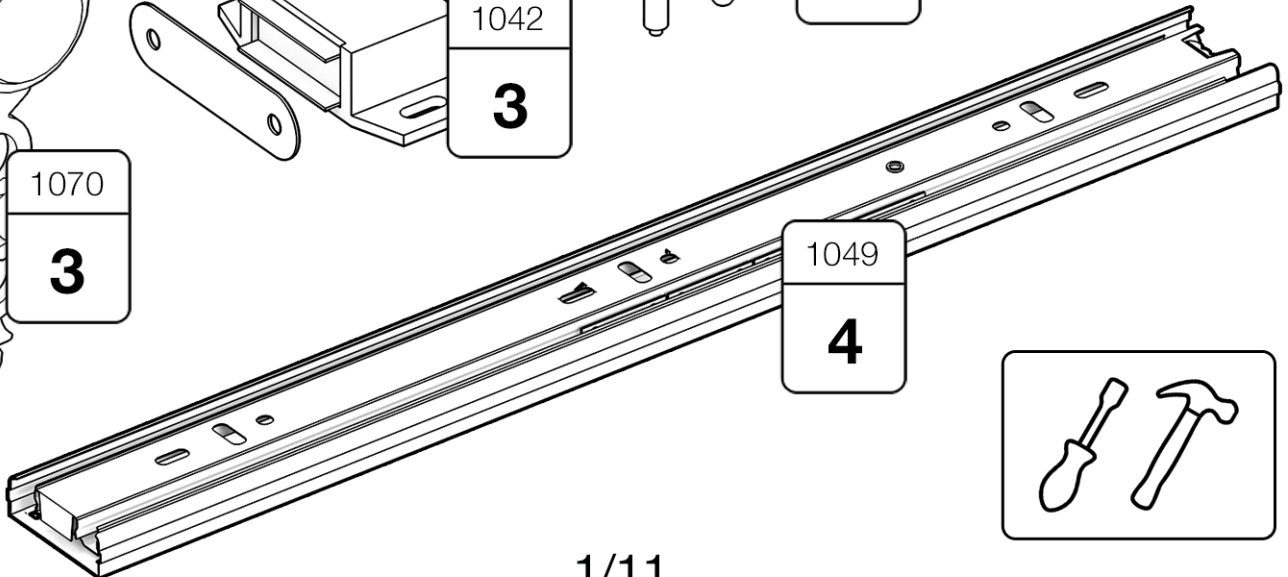 


1049  
**4**

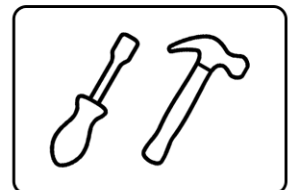 


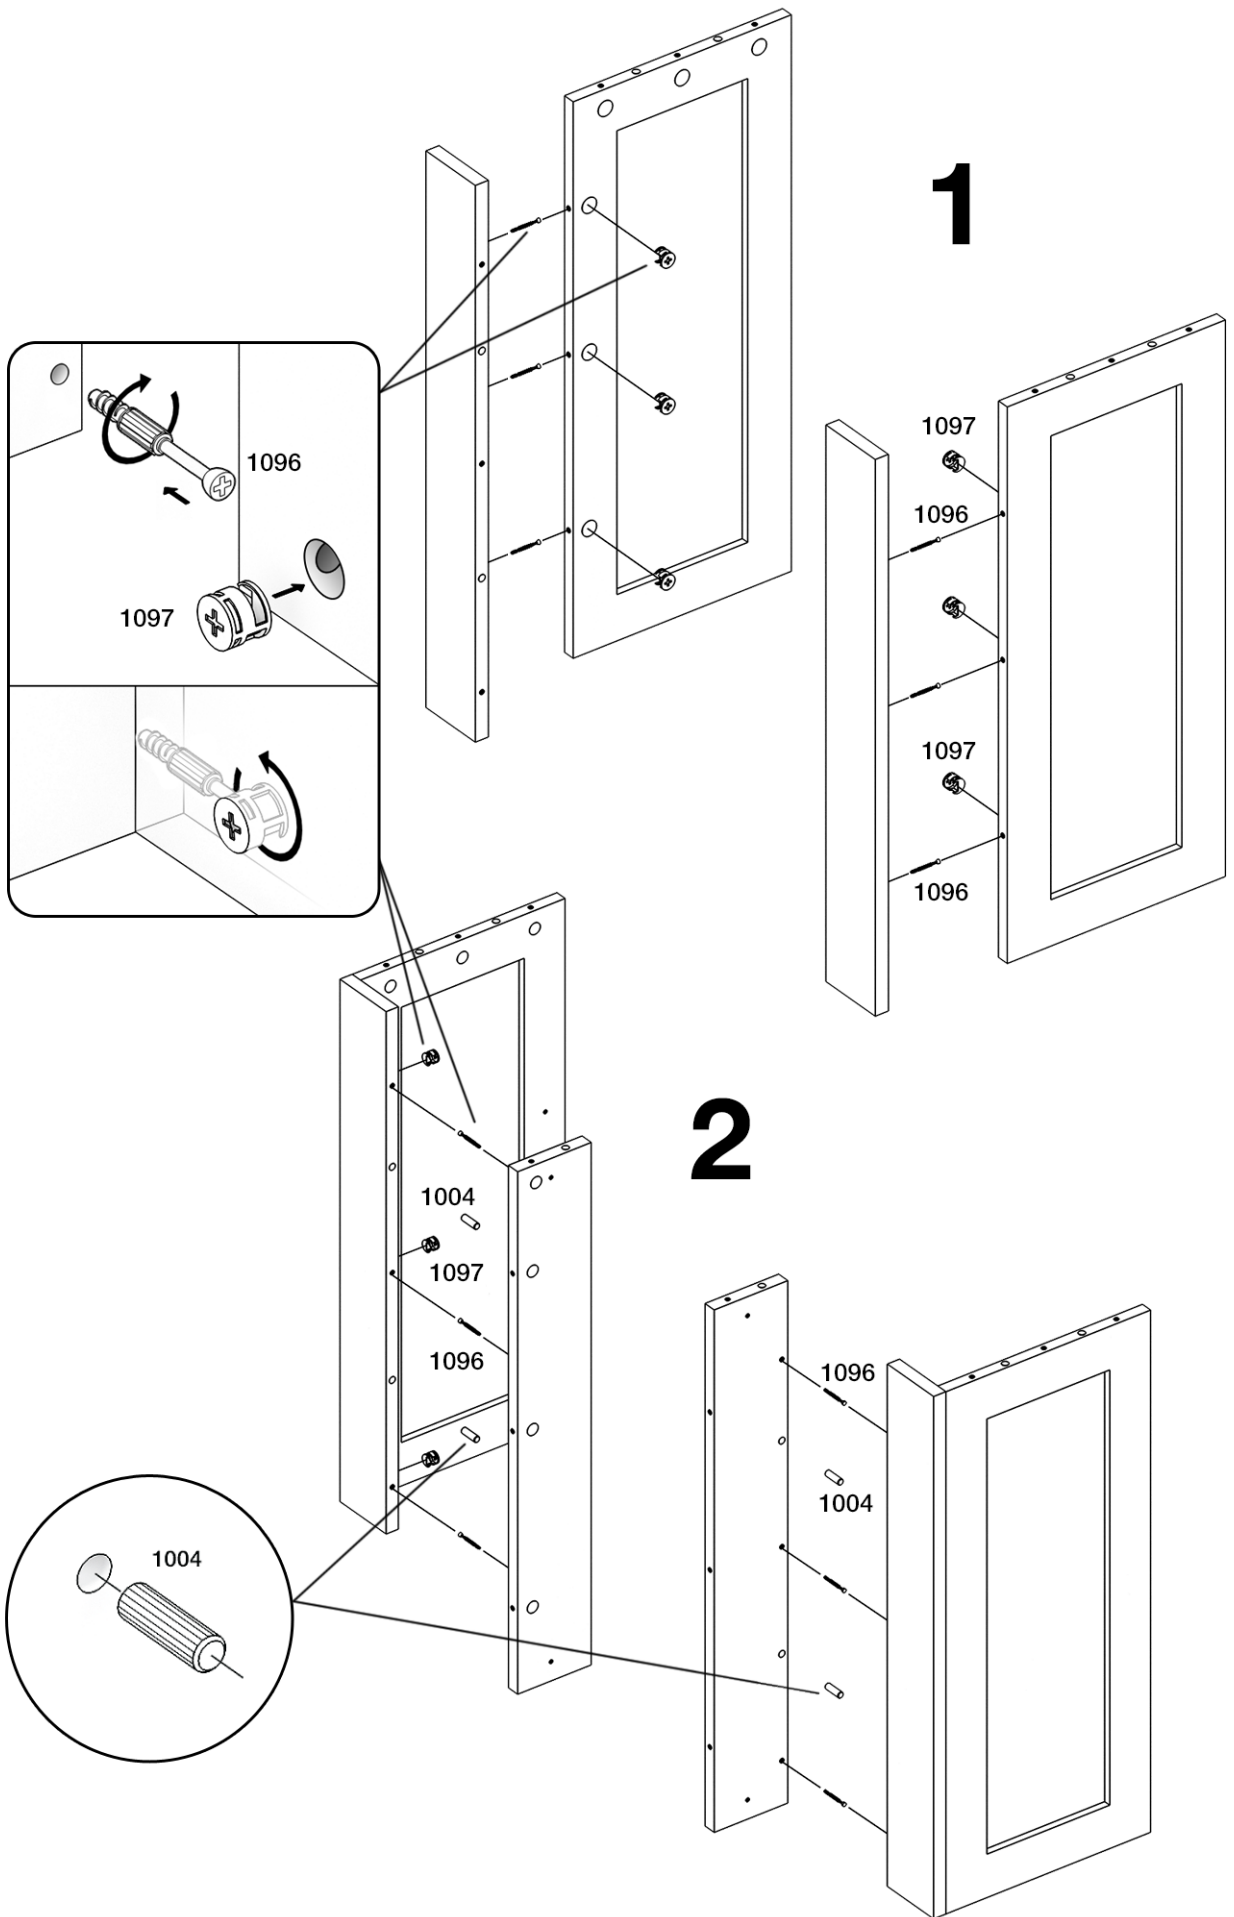 

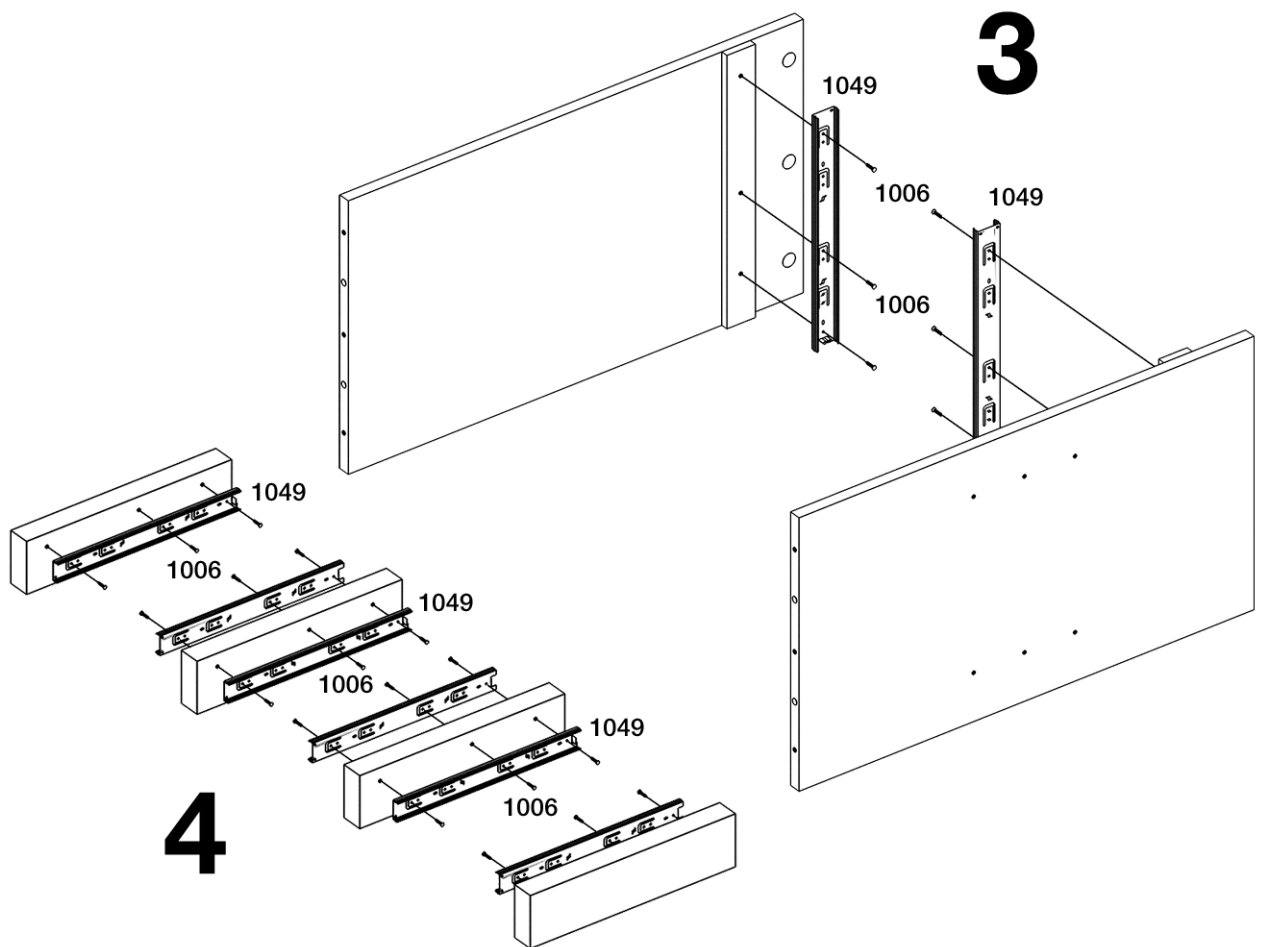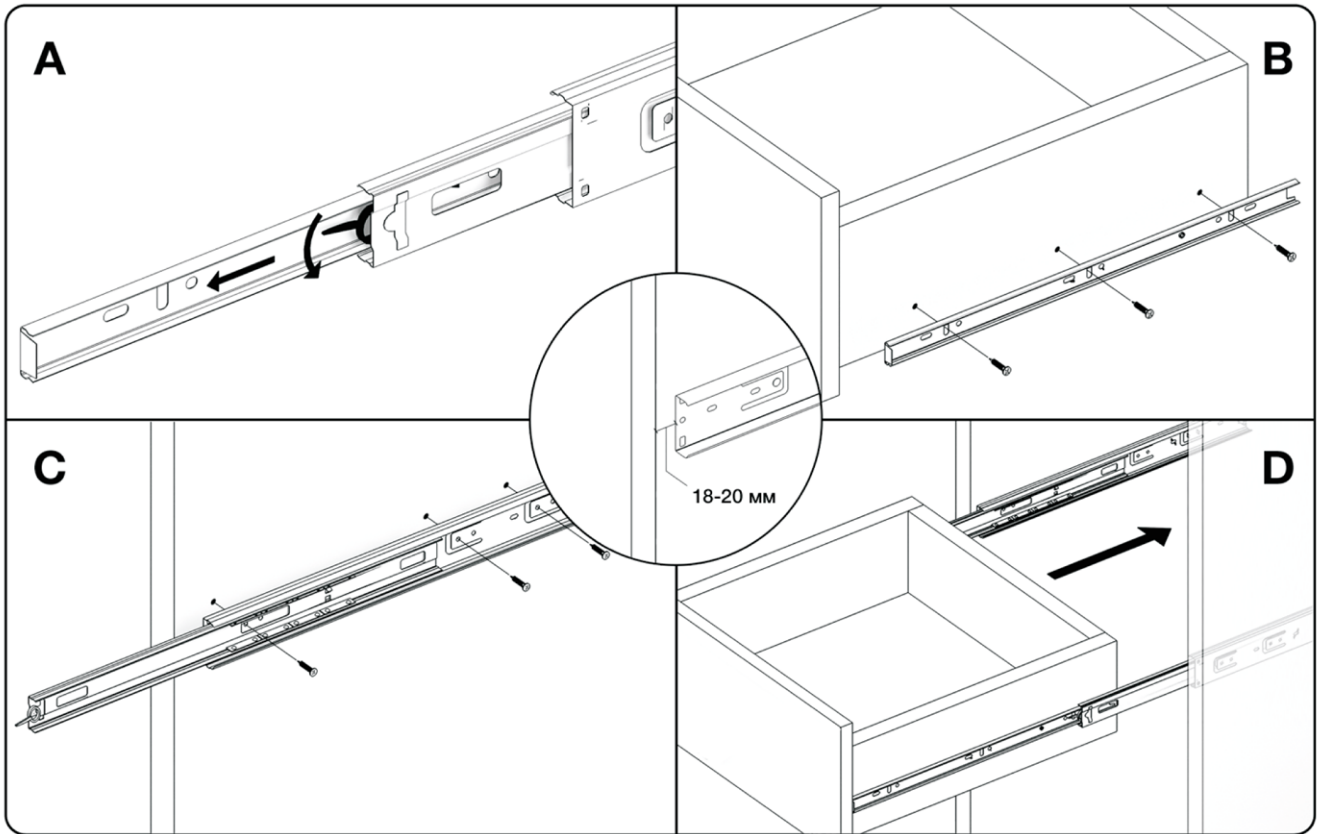  


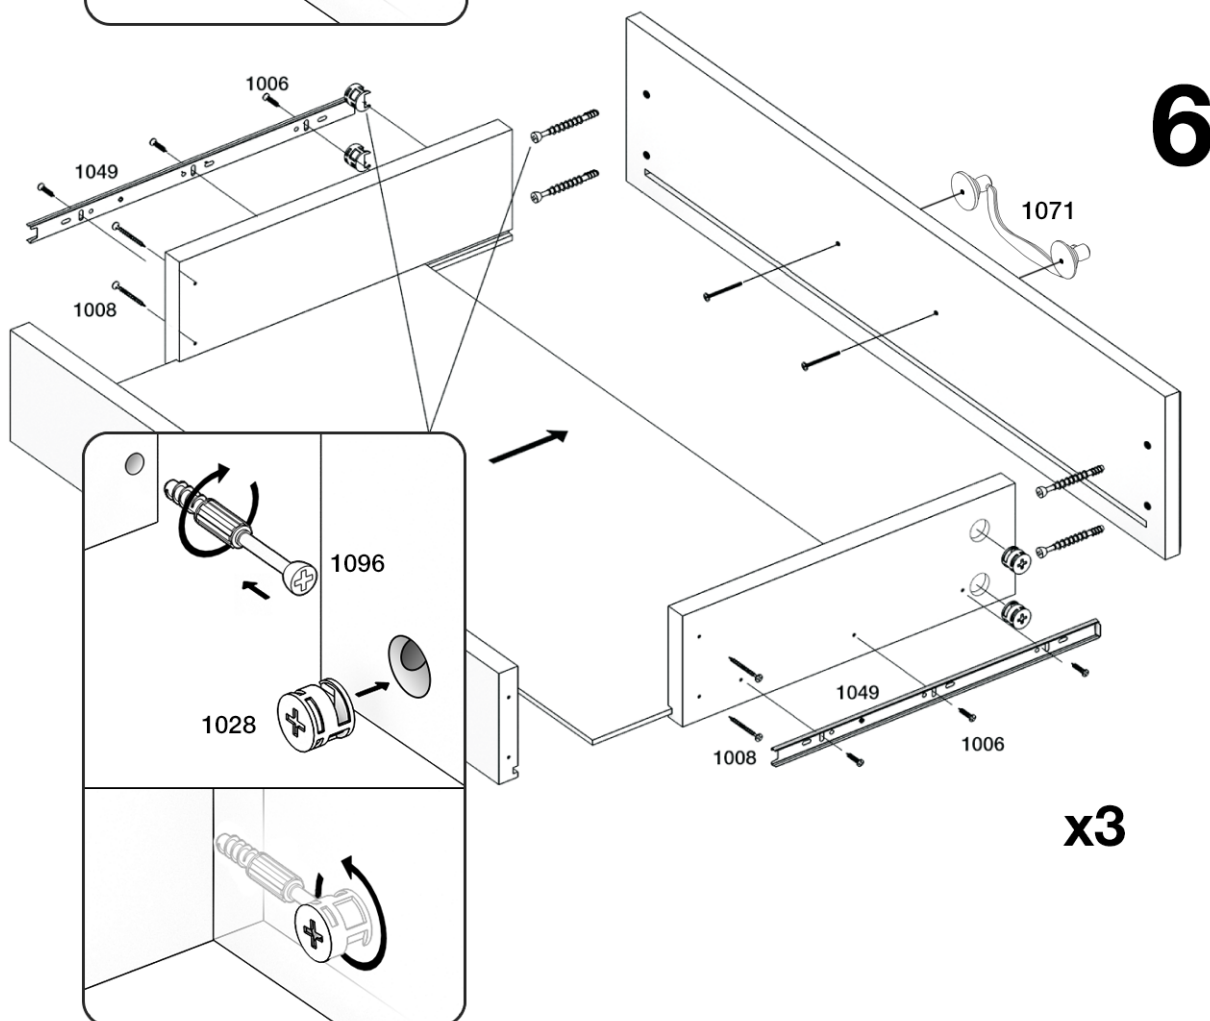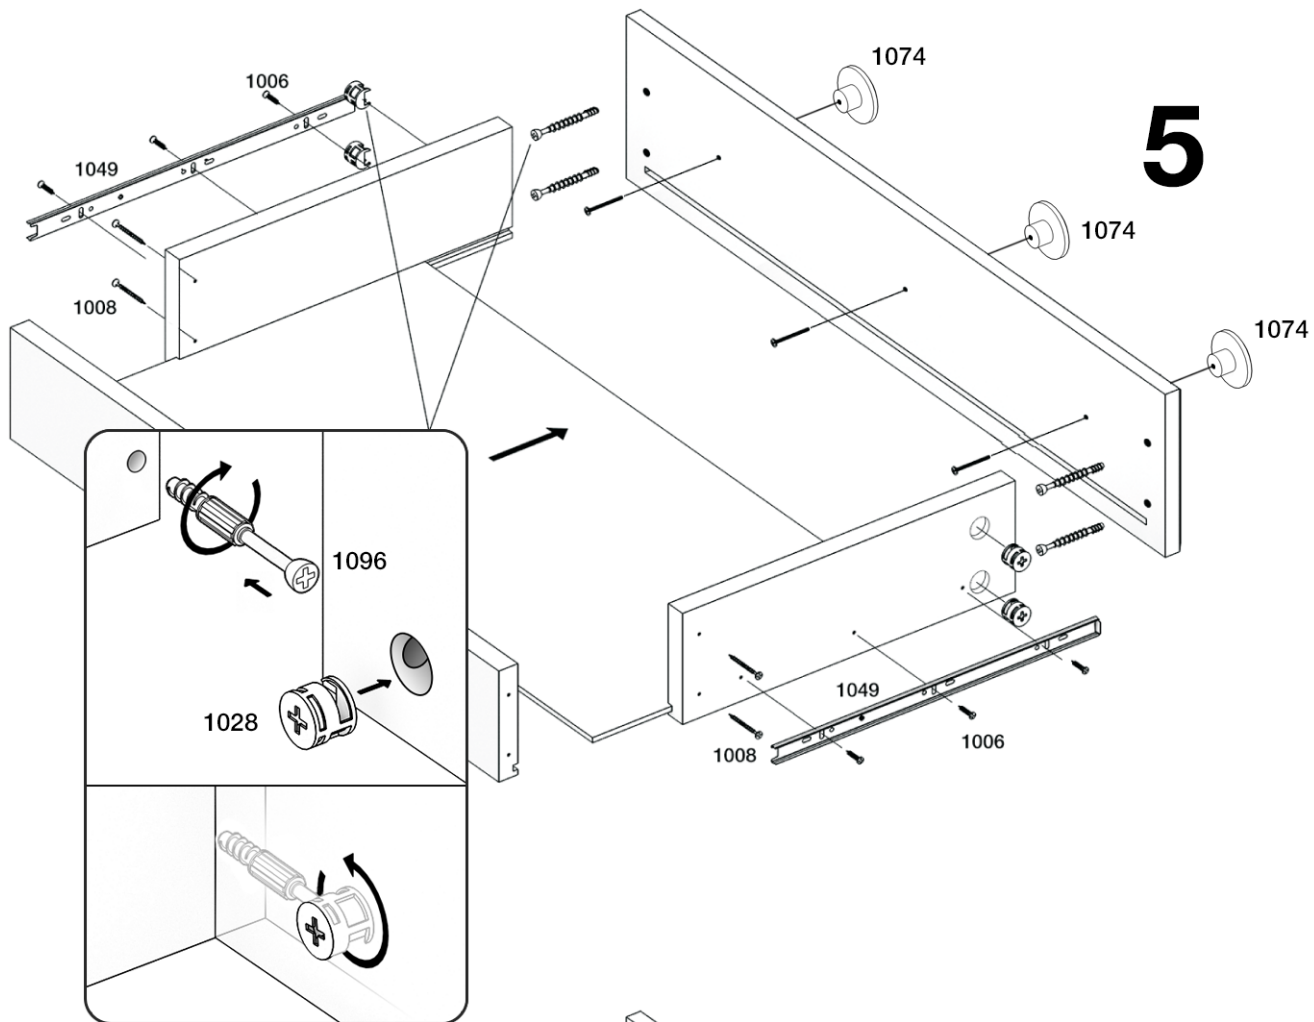  


# 7

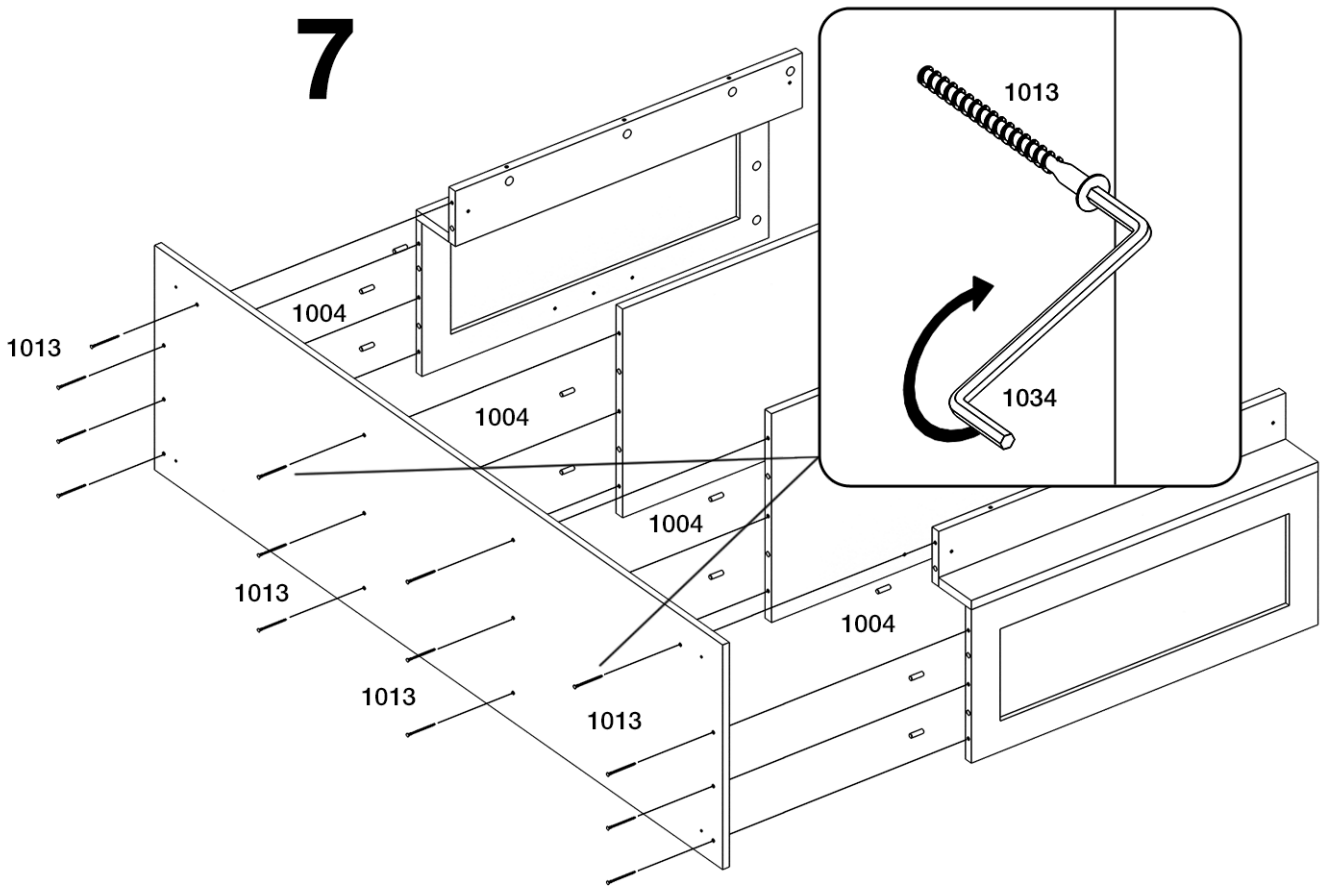 


# 8

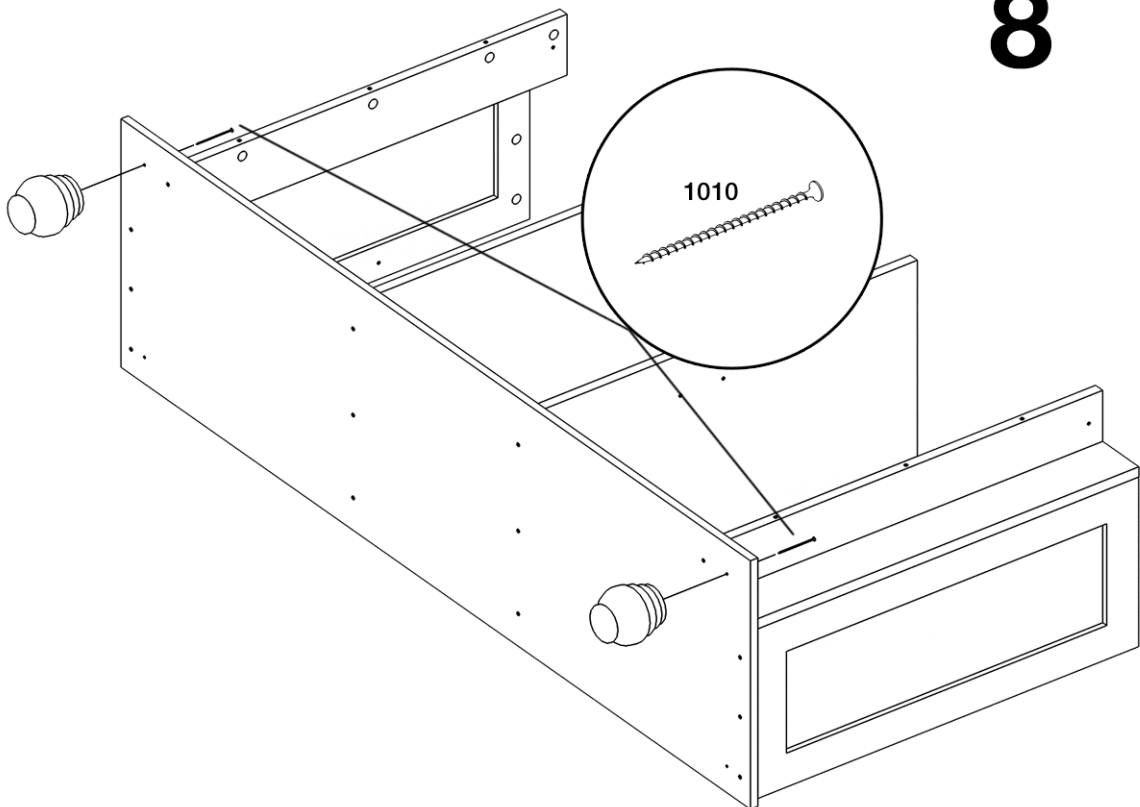 



9

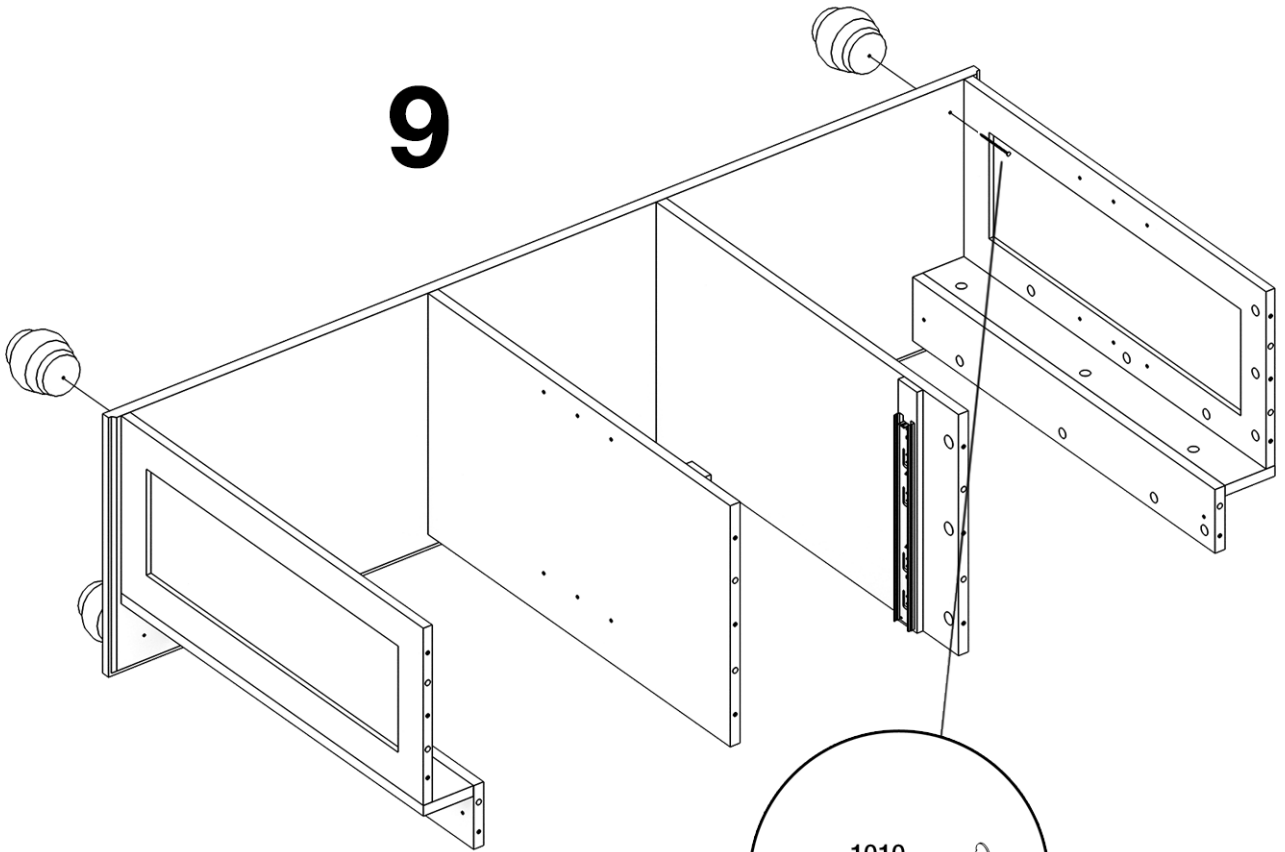 


10

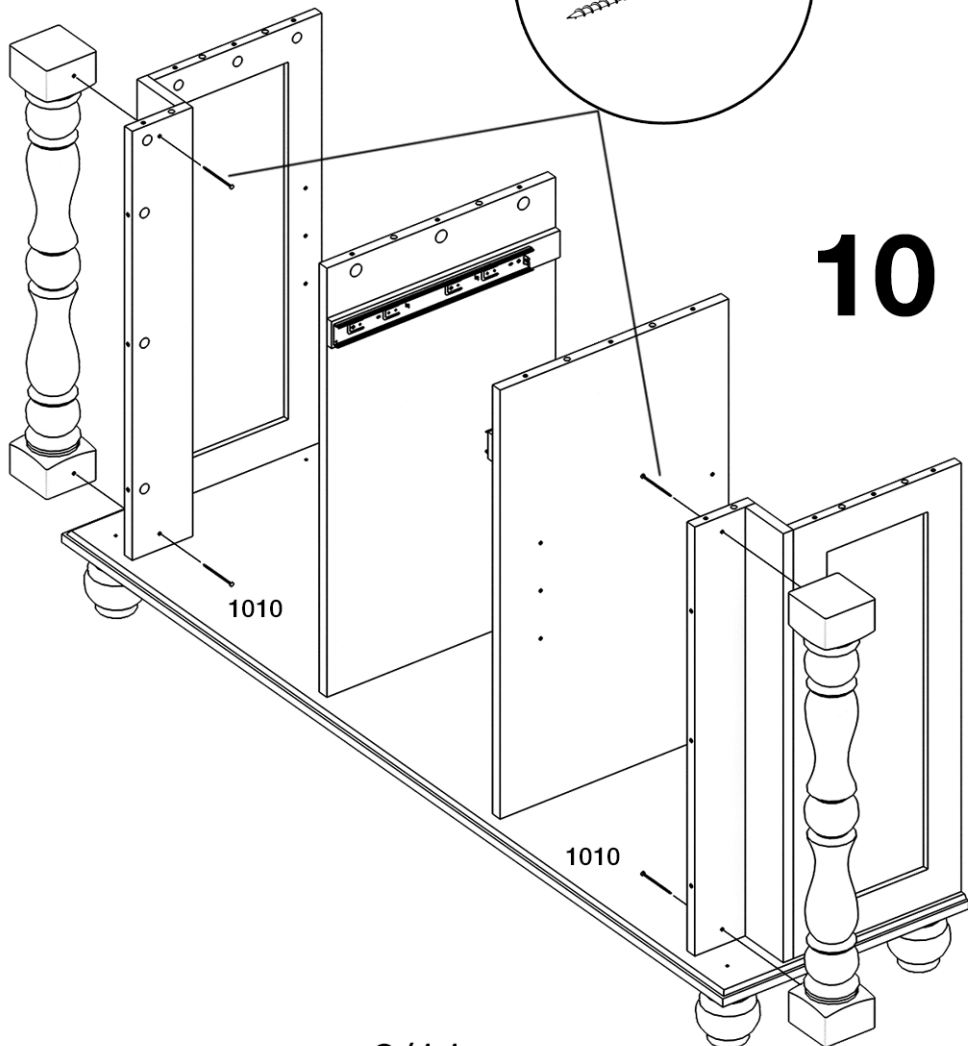 

# 11

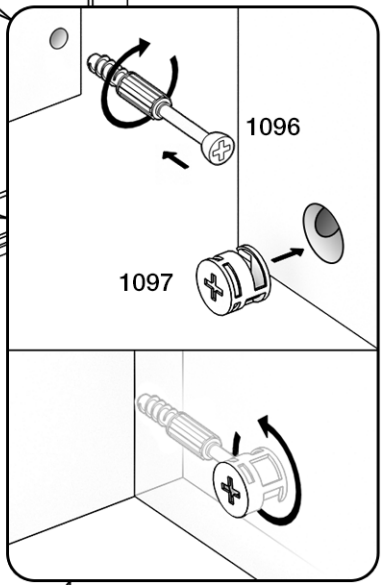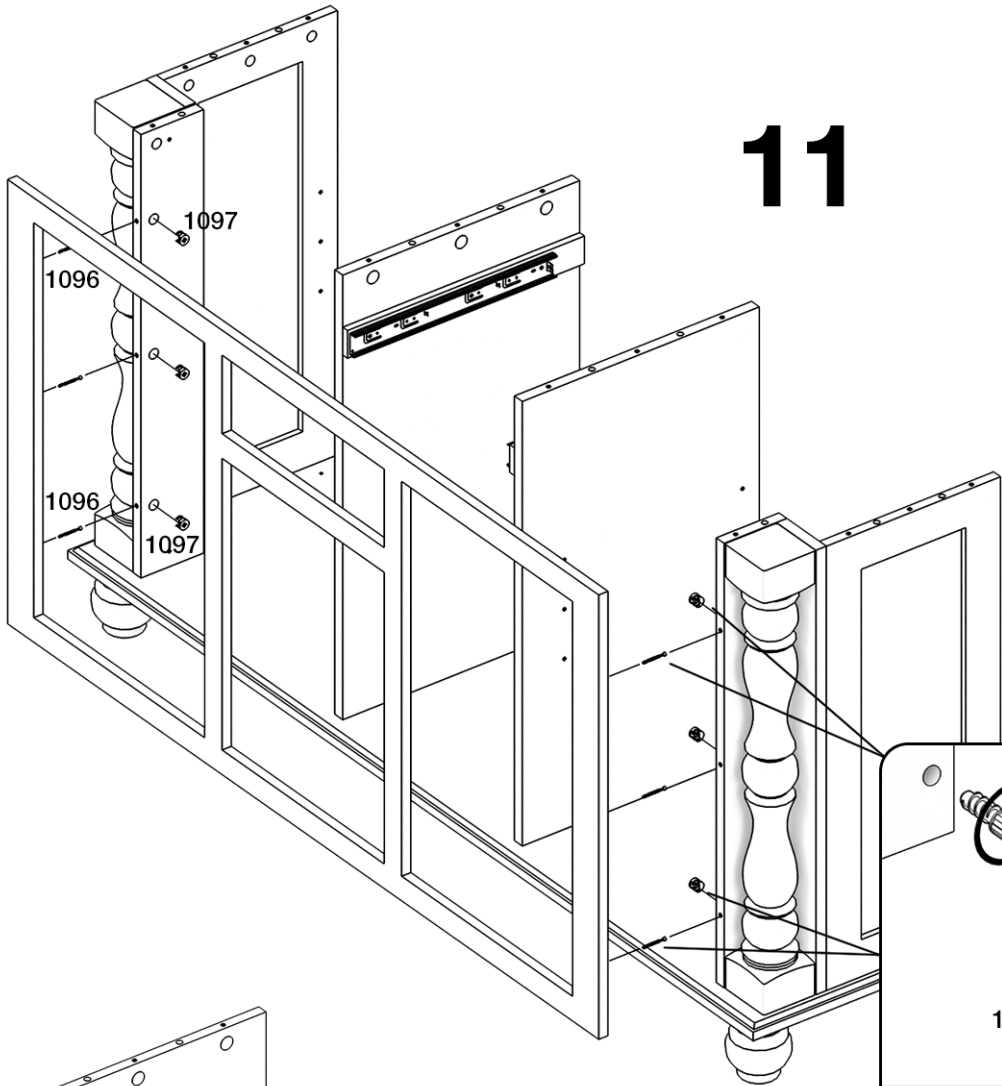  


# 12

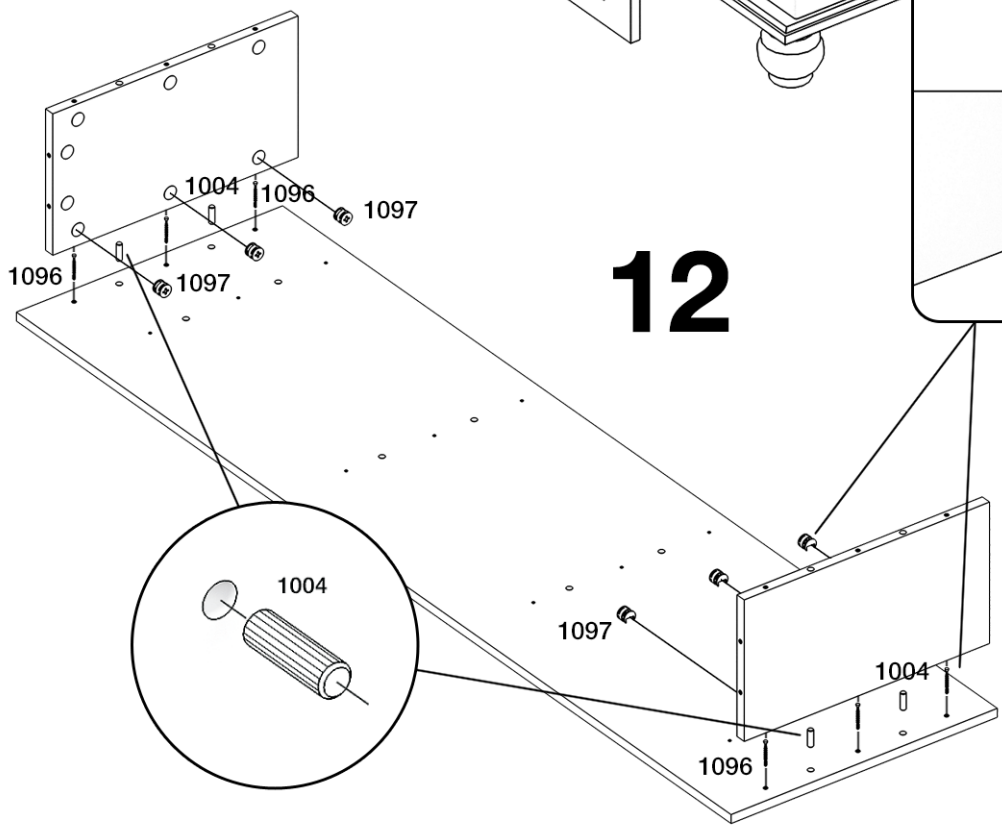 







# 13

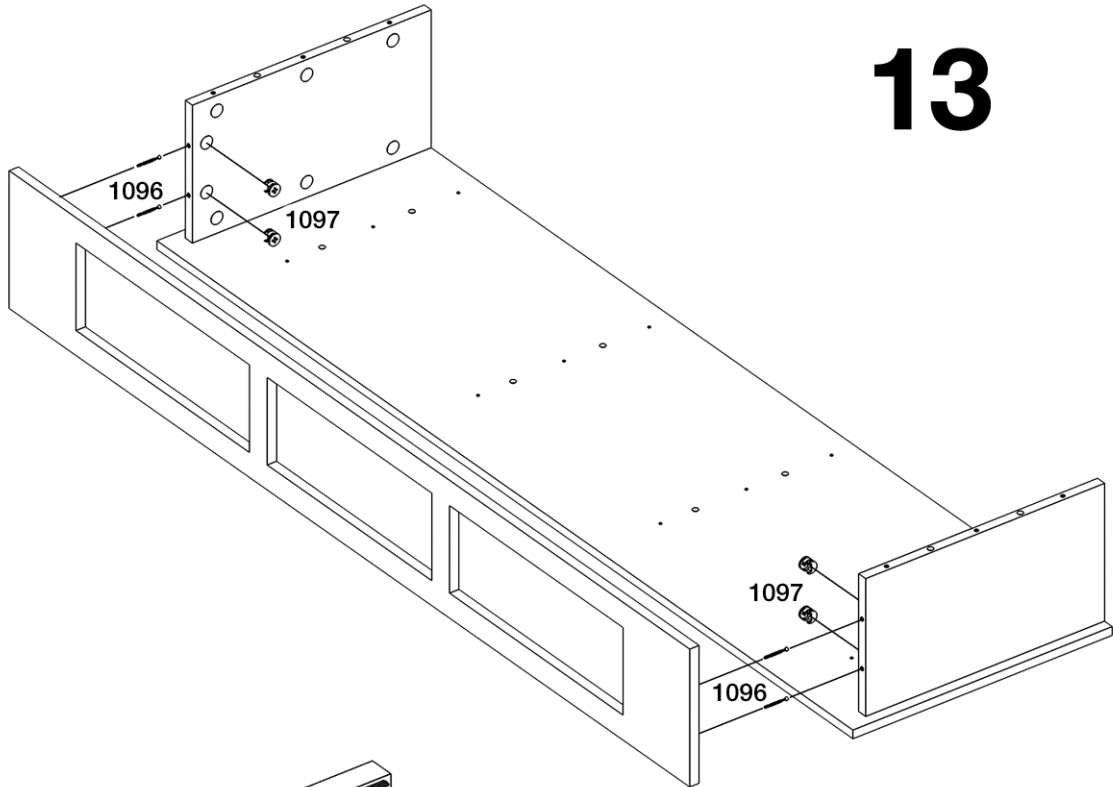 

# 14

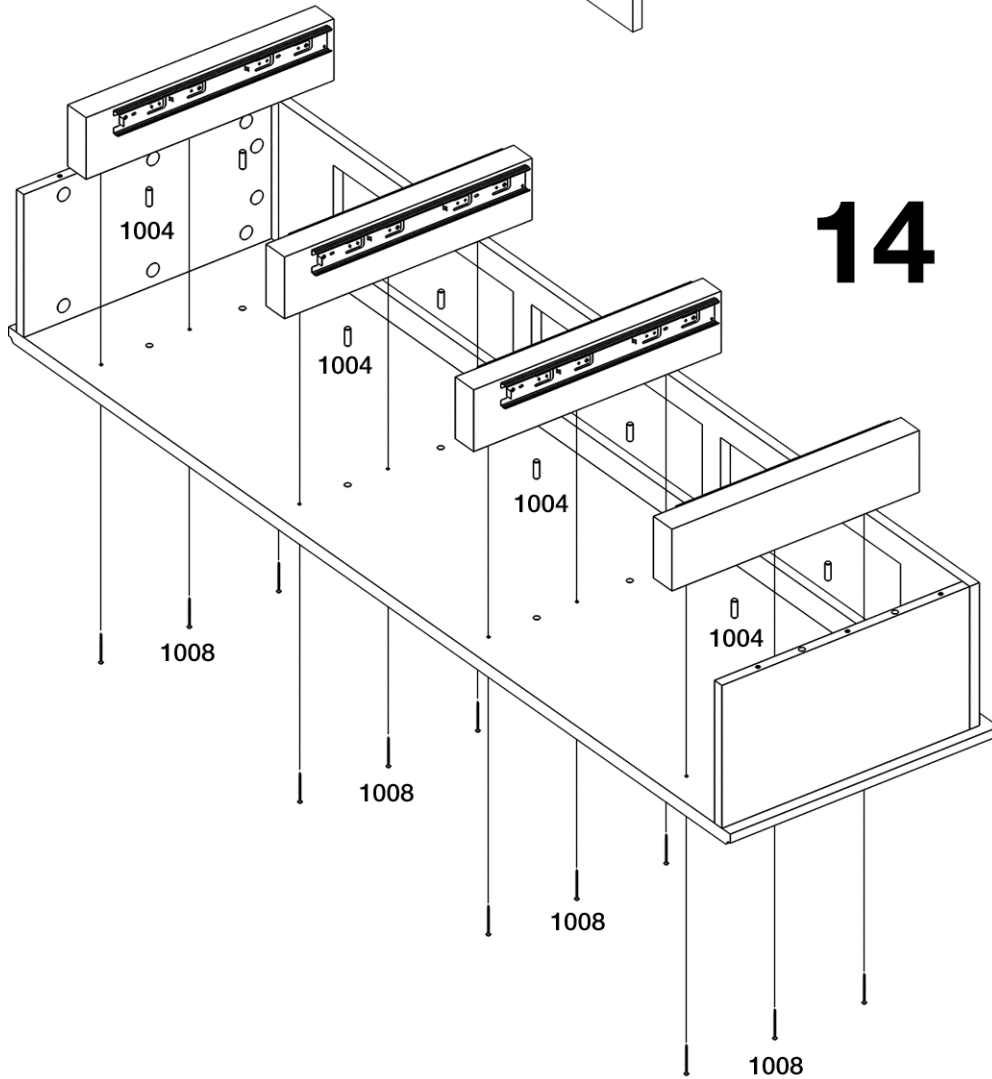 

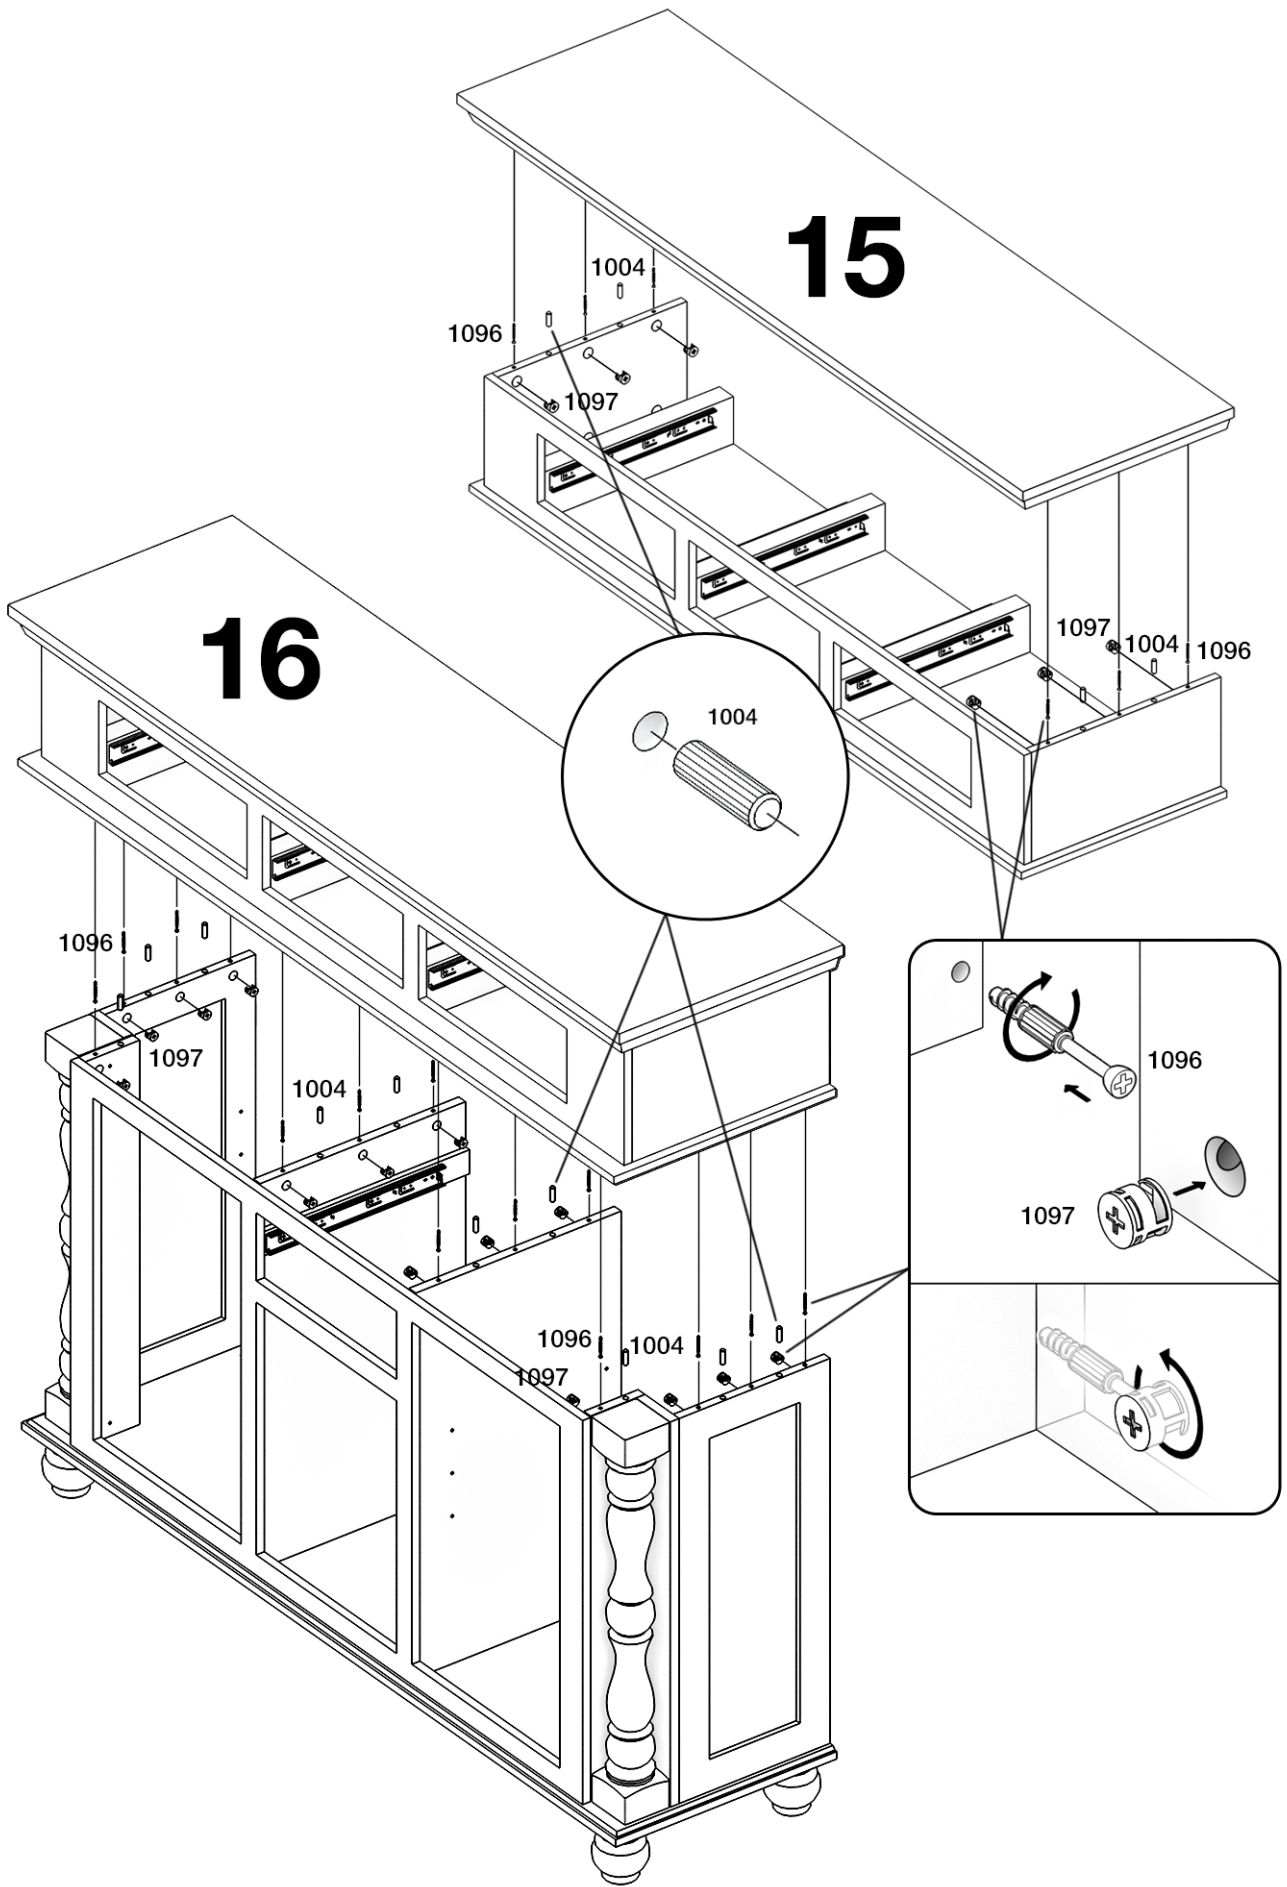 

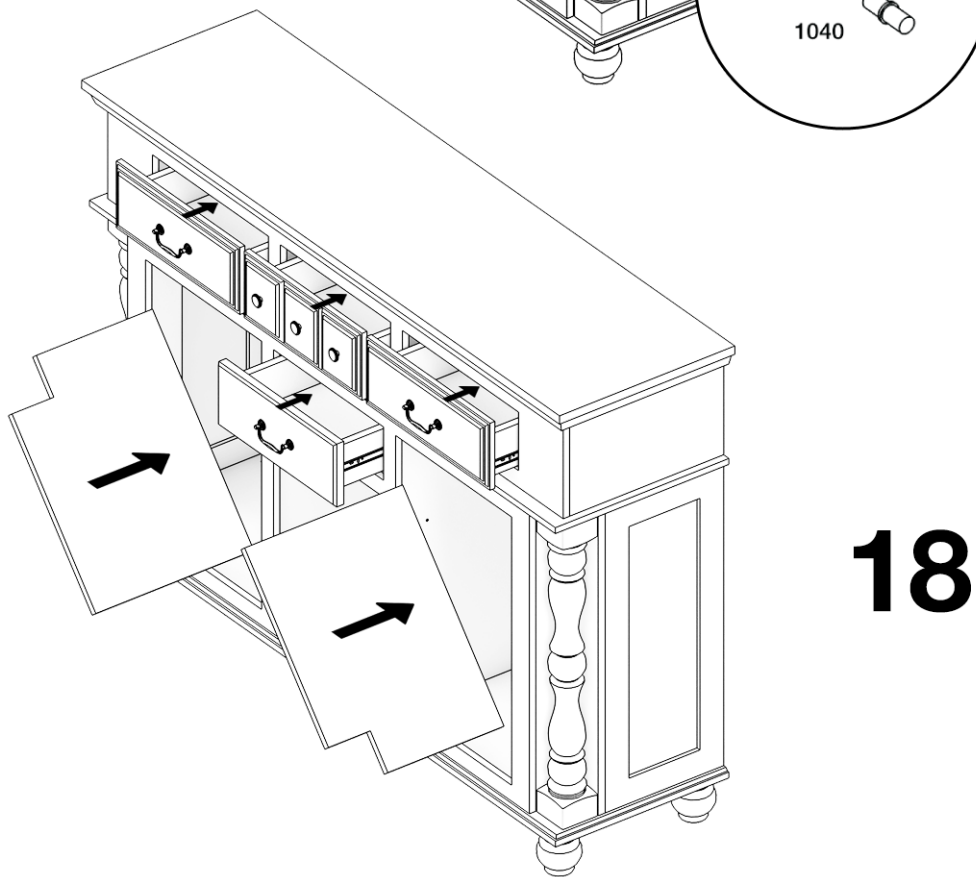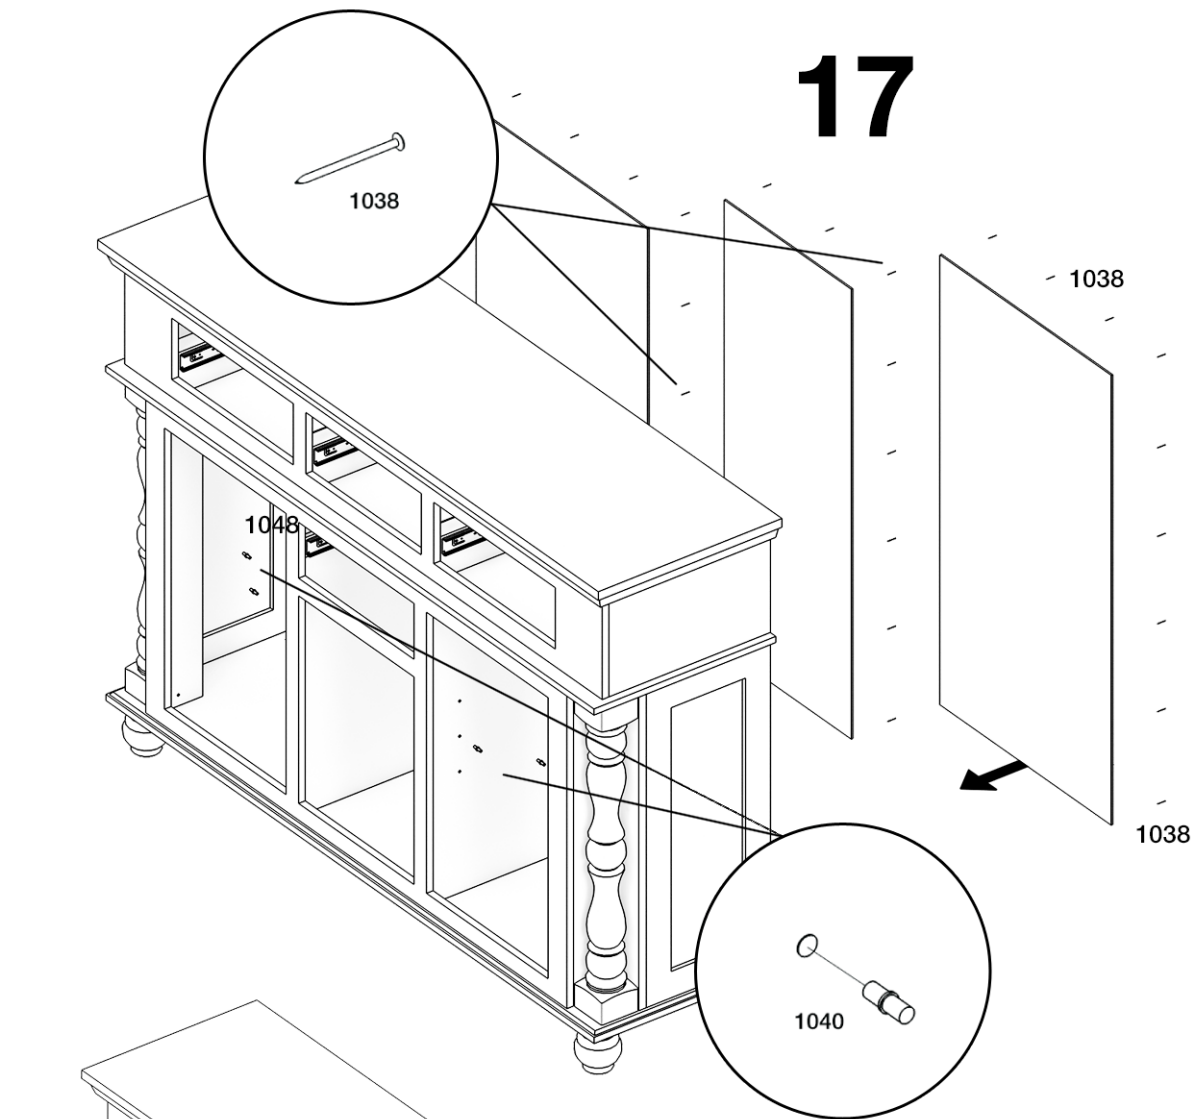  

# 19

