


# АЙНО

Шкаф 3-створчатый №6

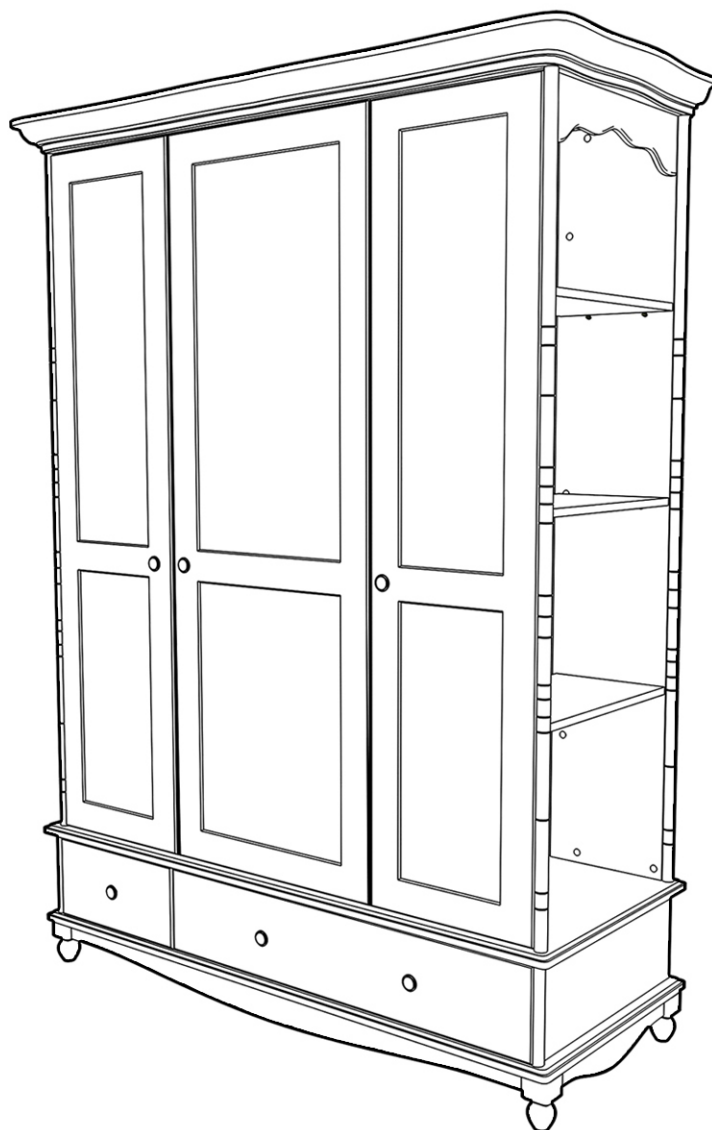


 **TIMBERICA**

**RU** Инструкция по сборке

**EN** Assembly instruction

**FI** Koontaohje



1006  
**74**



1097  
**86**



1040  
**16**




1096  
**86**



1004  
**50**



1038  
**82**

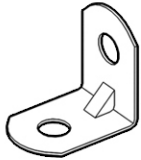


1036  
**4**




1020  
**5**




1008  
**8**

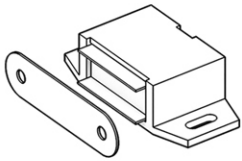


1042  
**2**

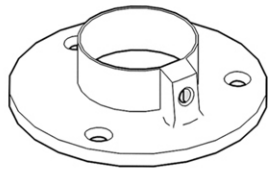


1047  
**2**

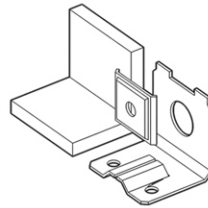


1099  
**2**


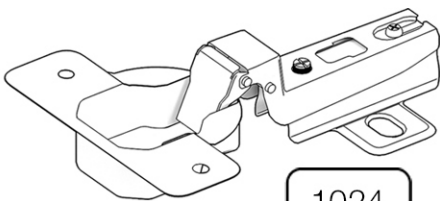



1024  
**6**

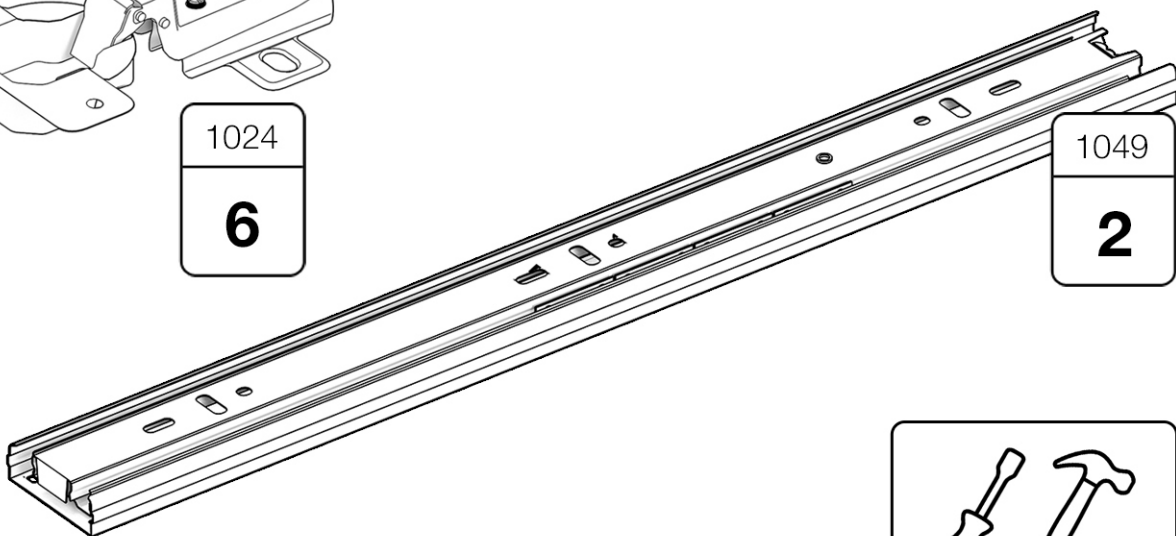





1049  
**2**

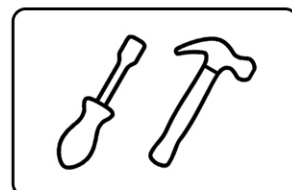

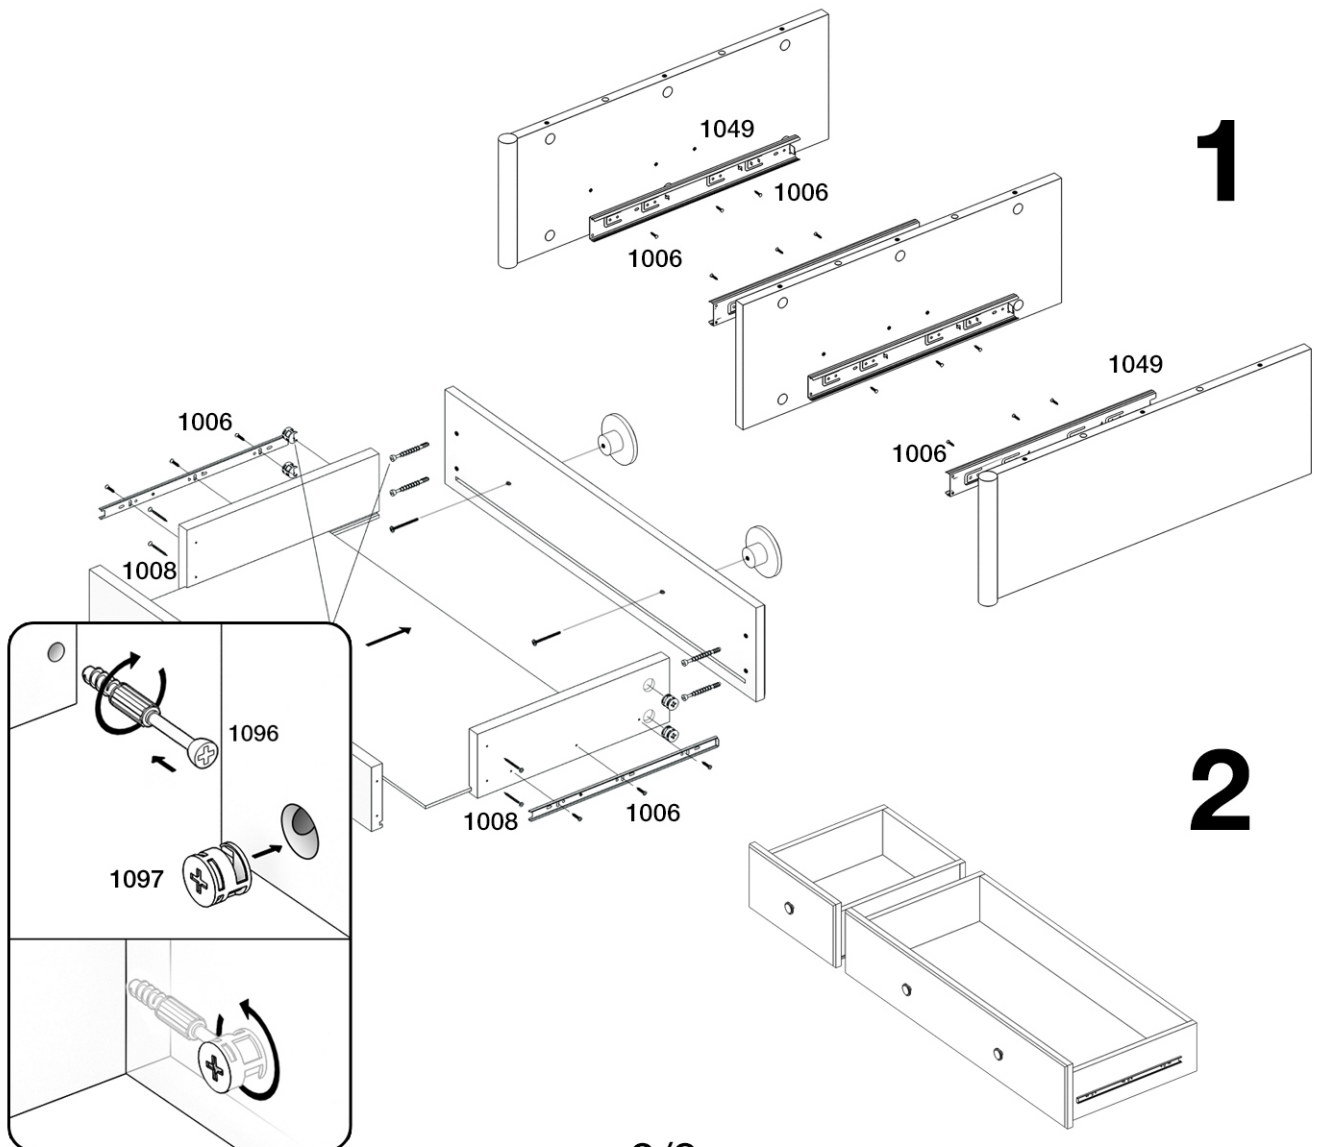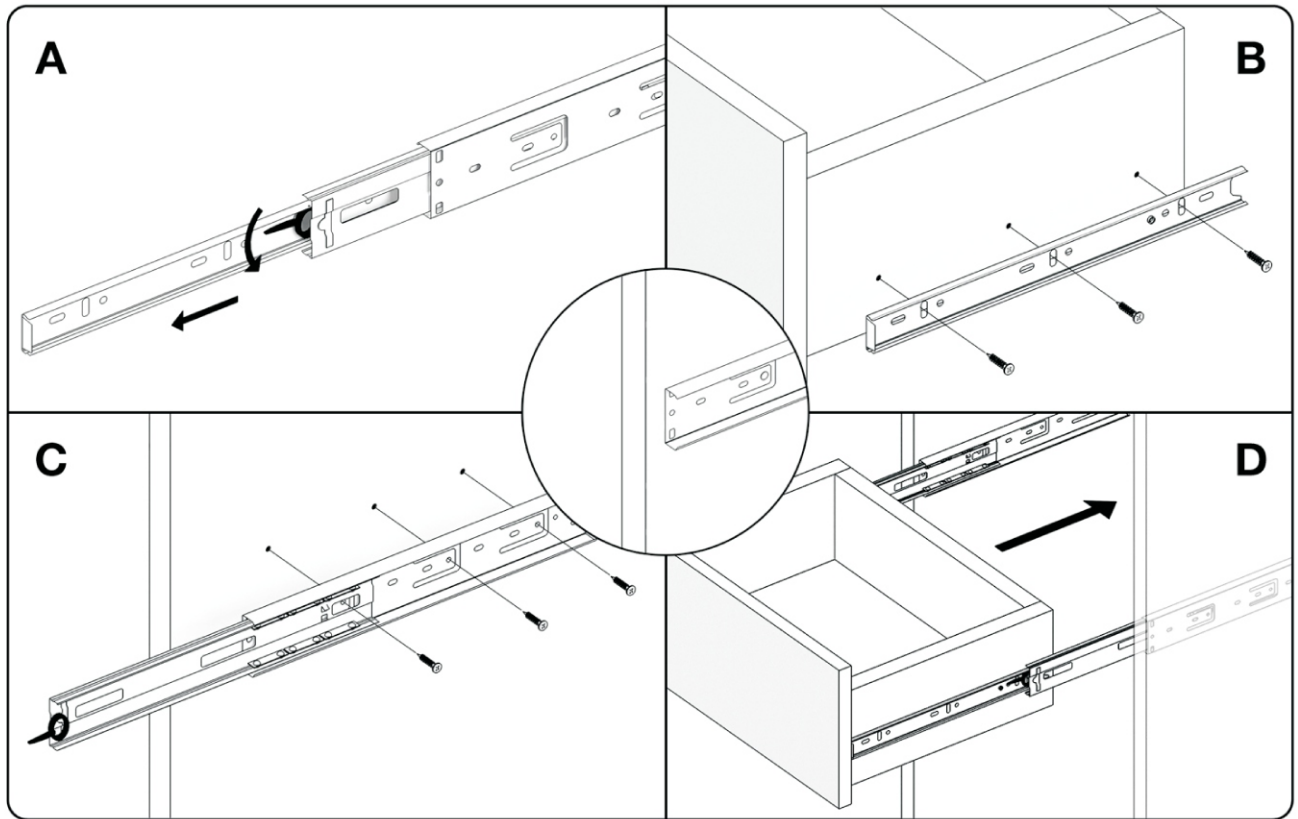

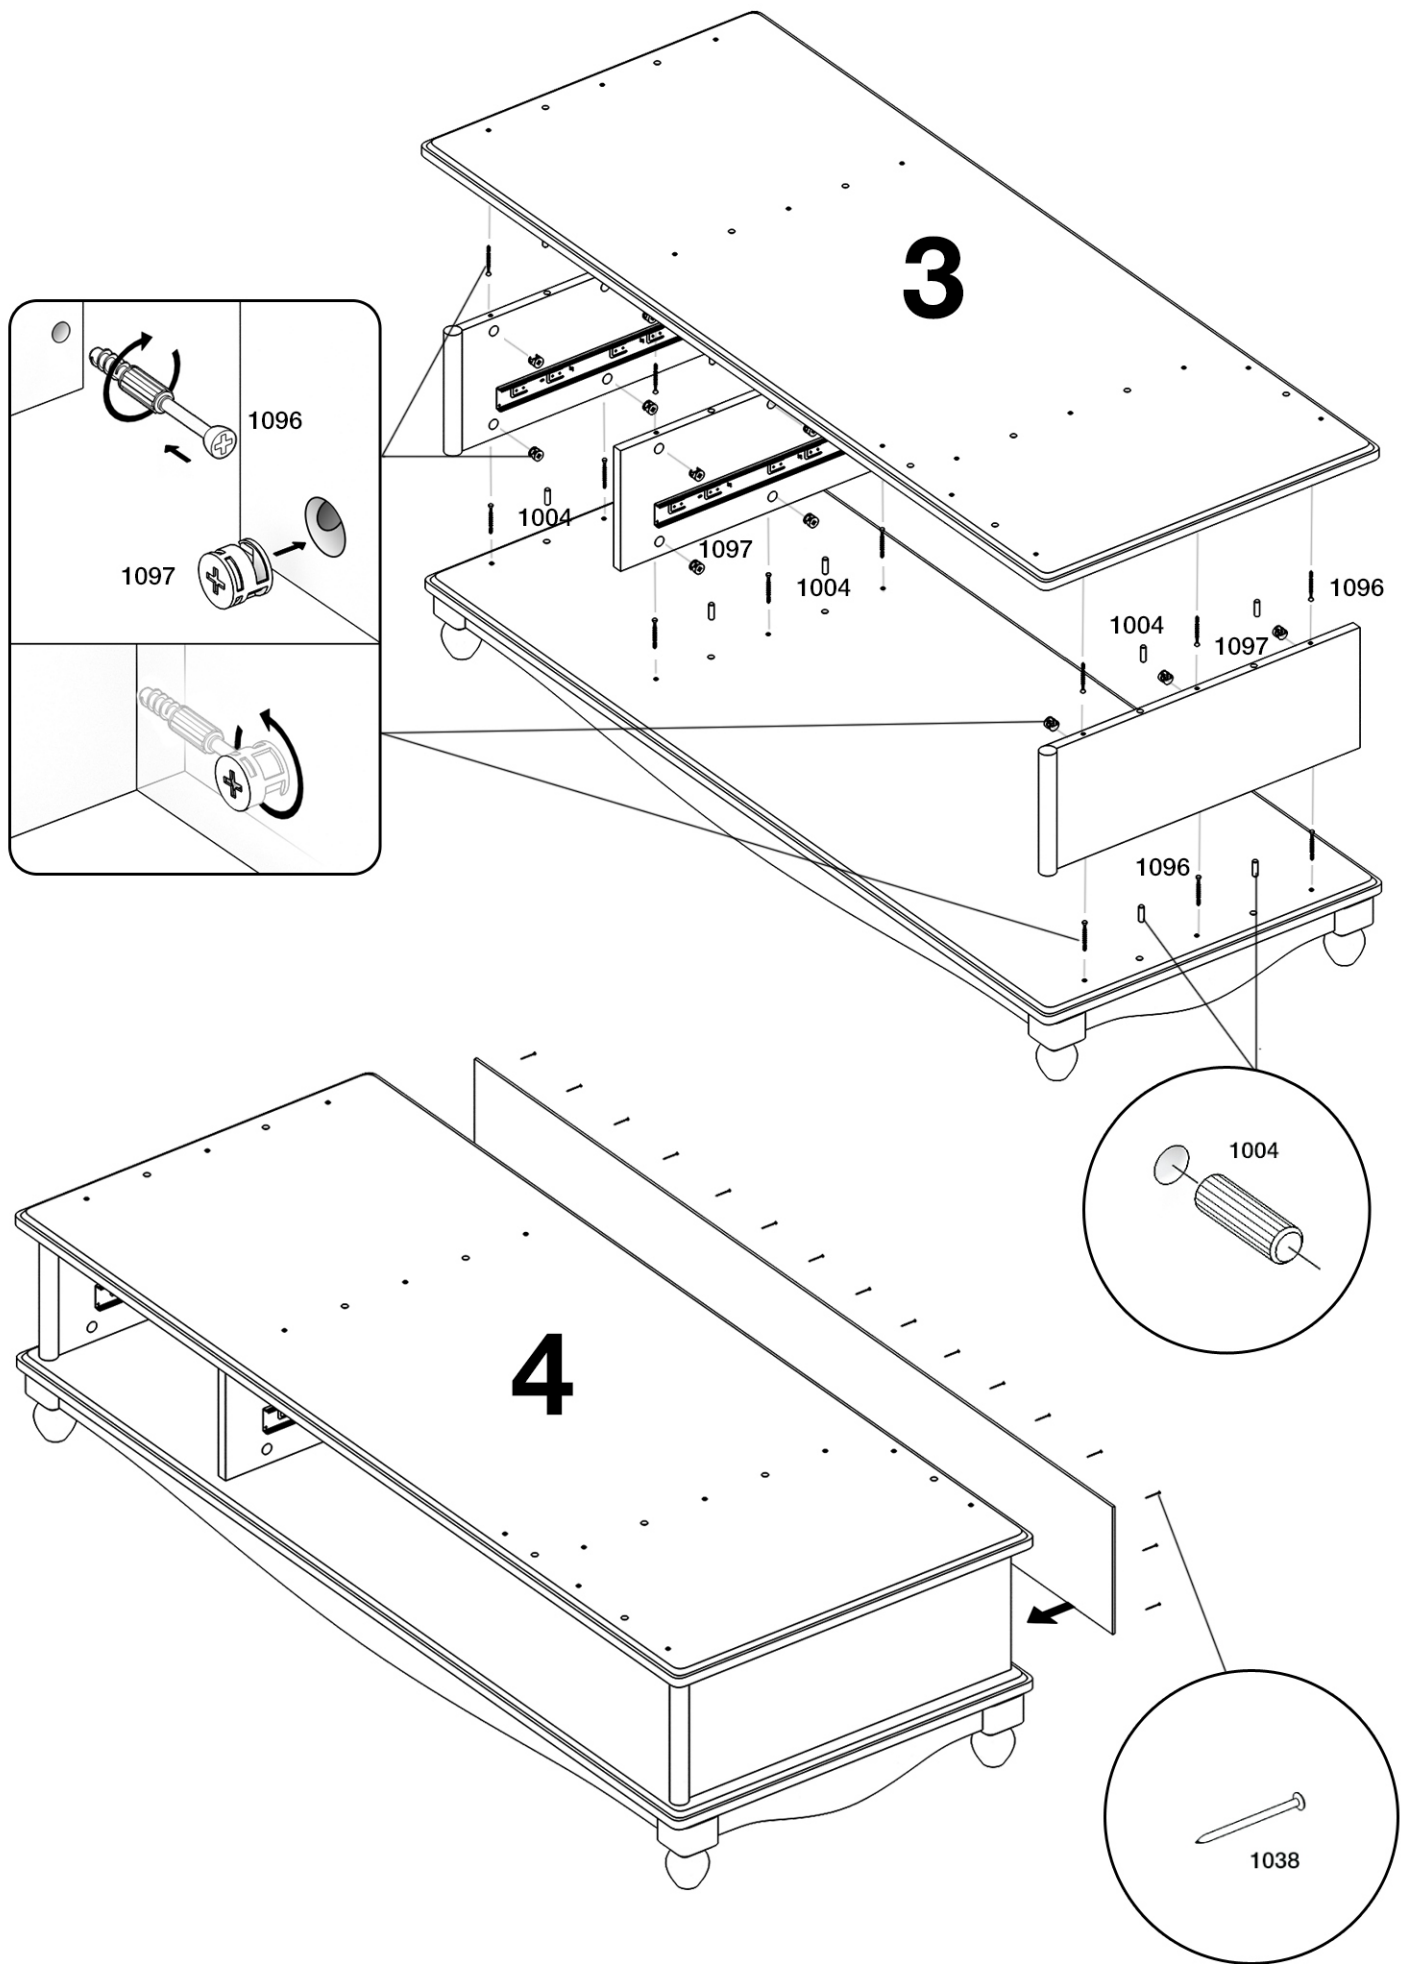


5

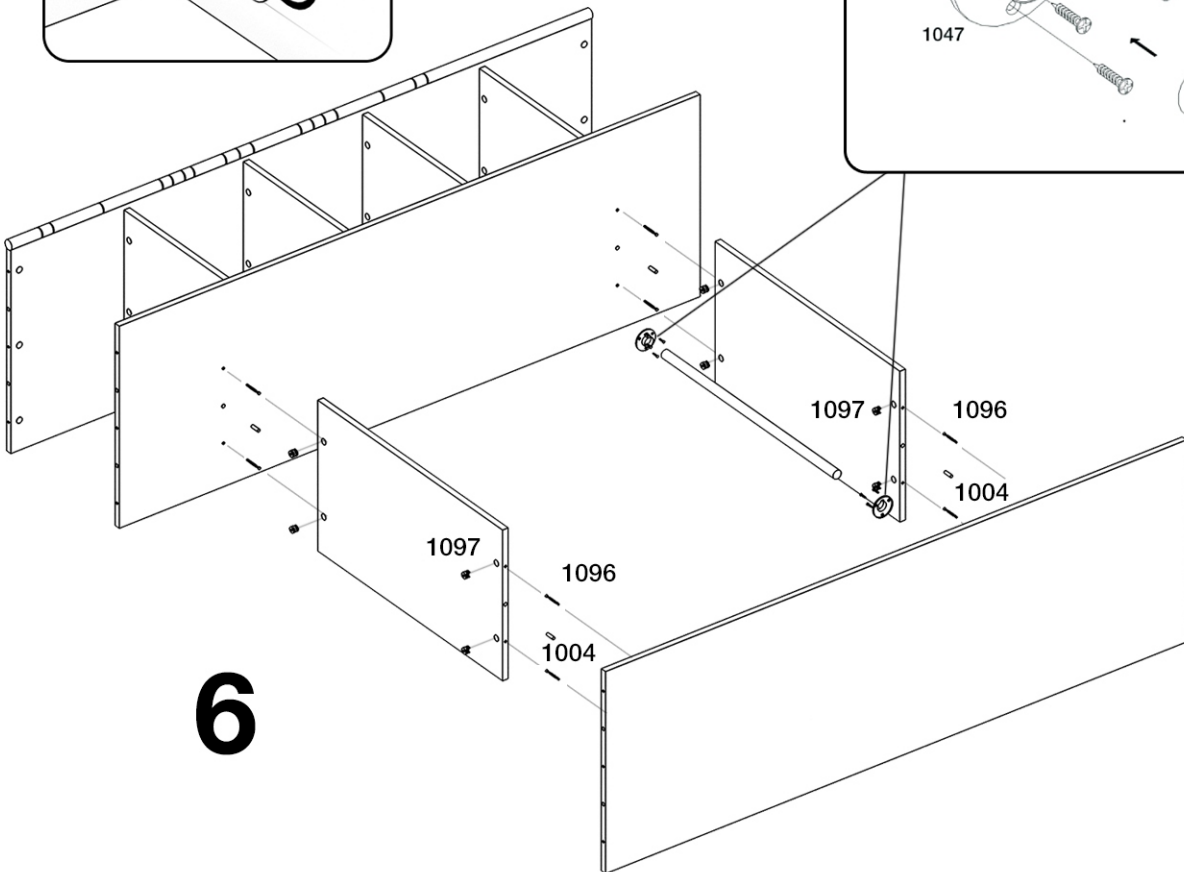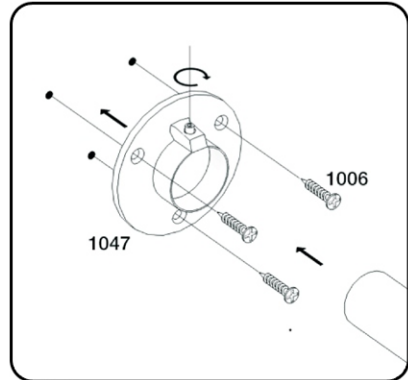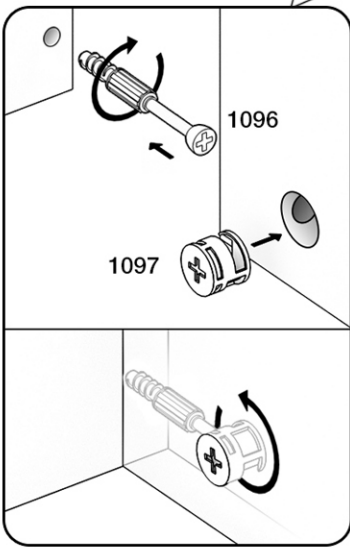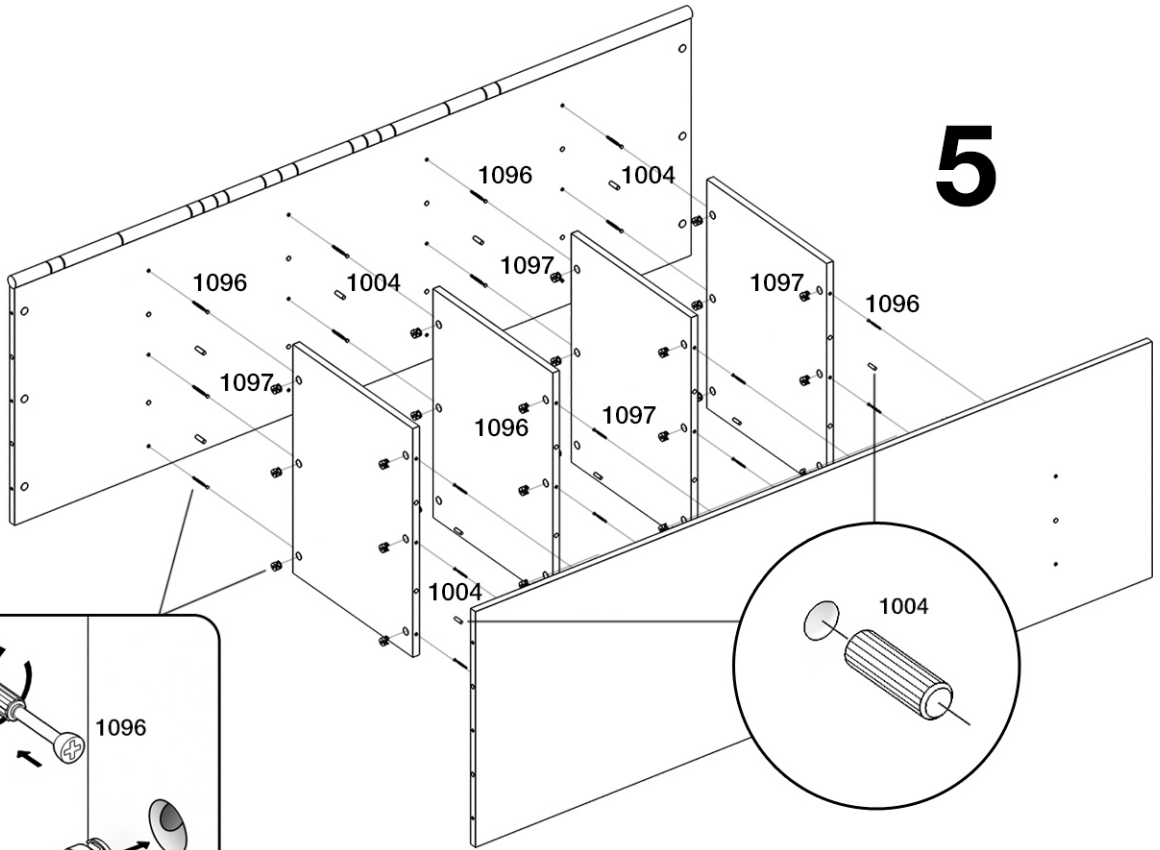


6




7

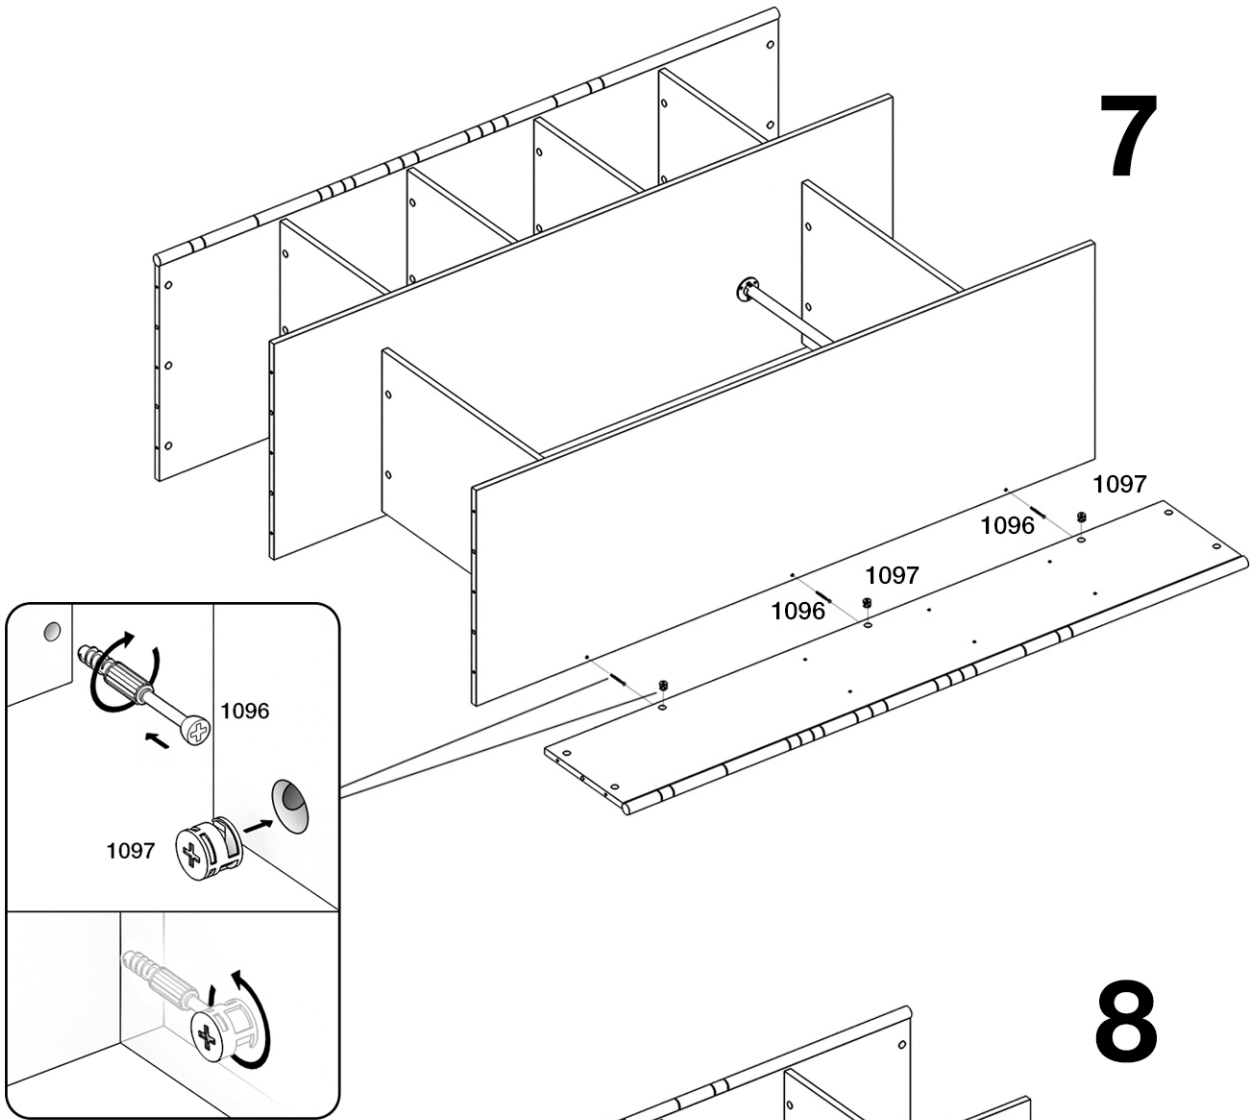



8

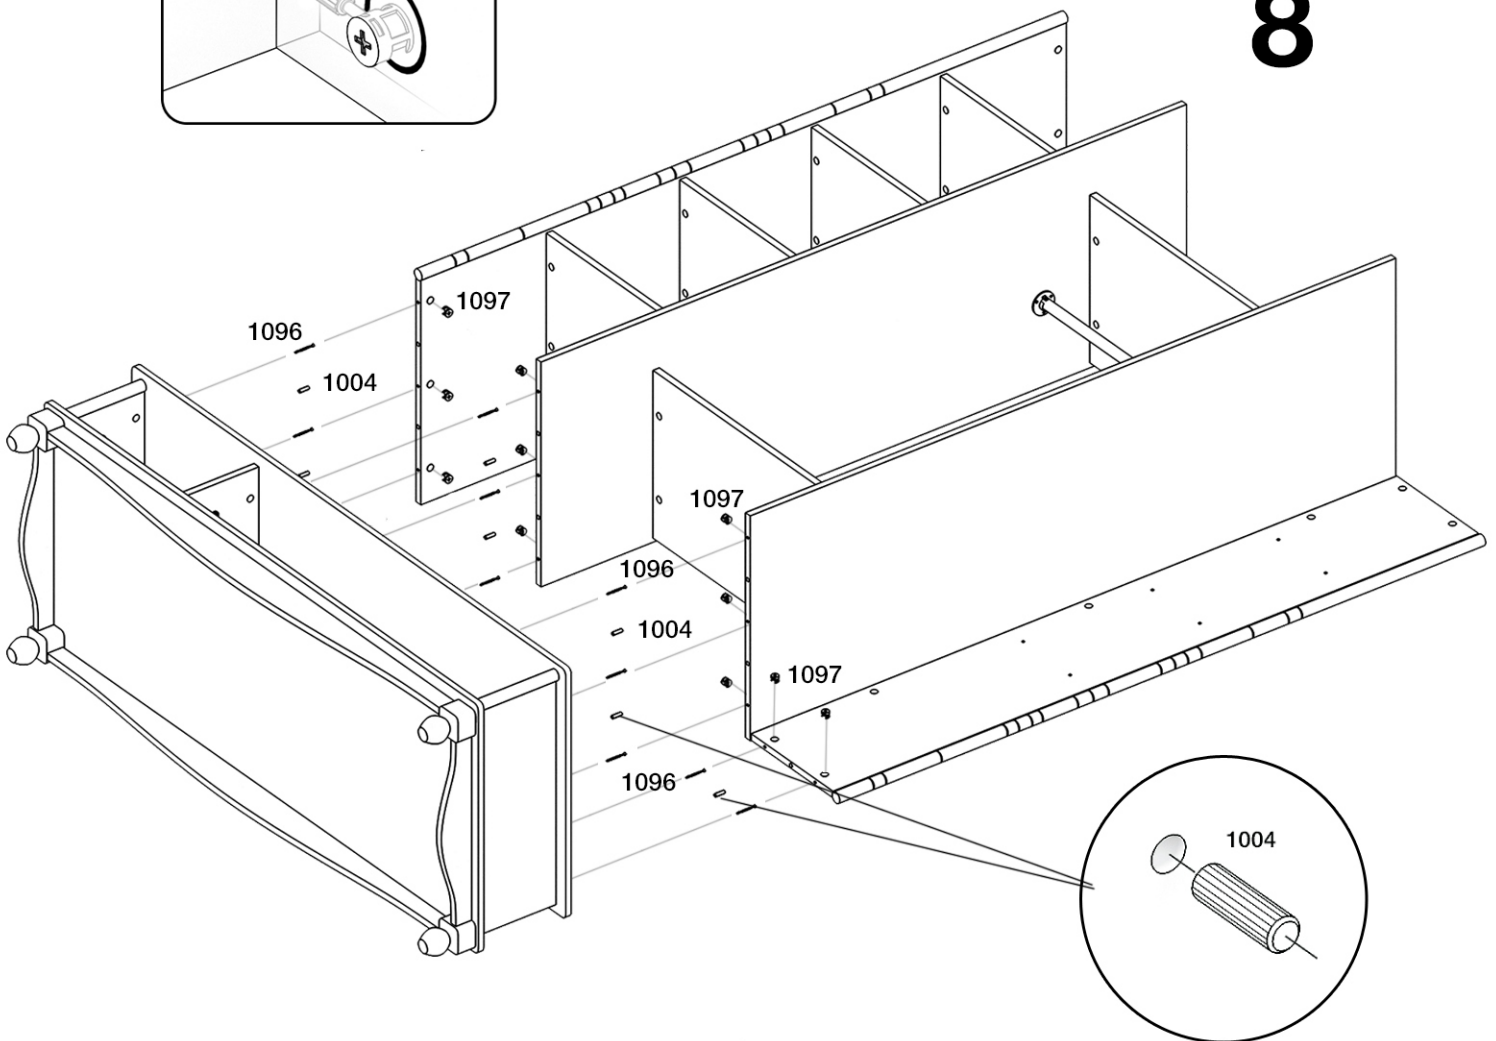



5/8

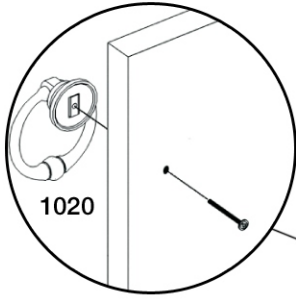


9

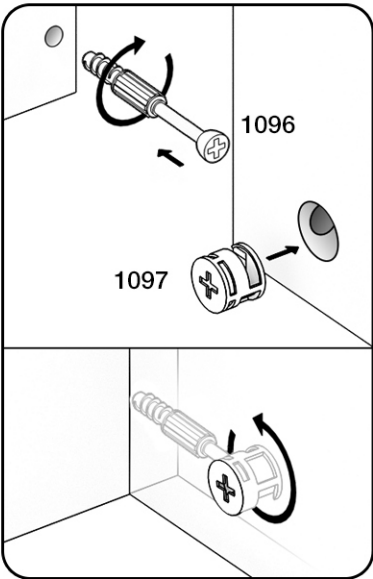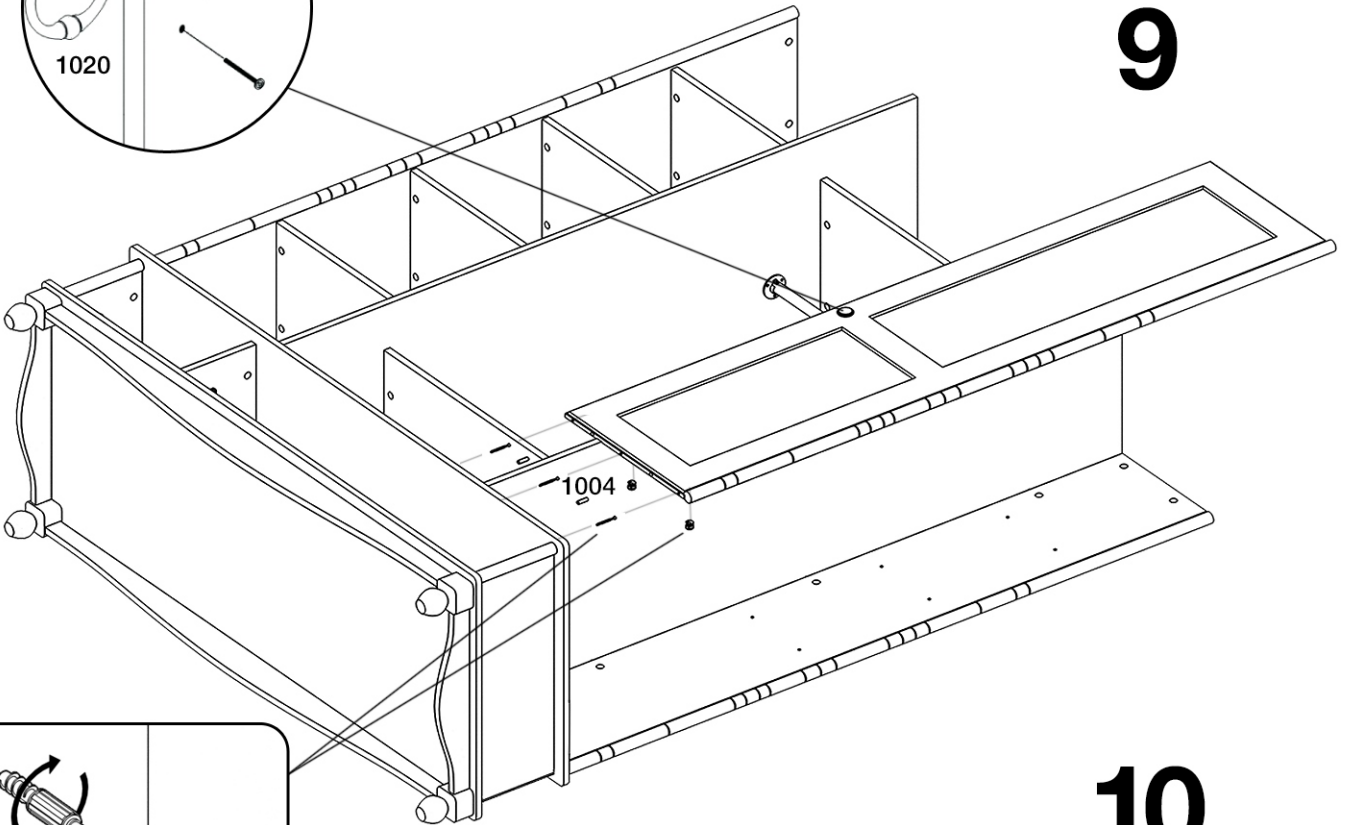


10

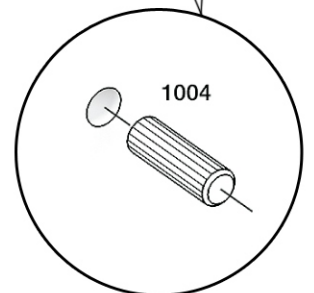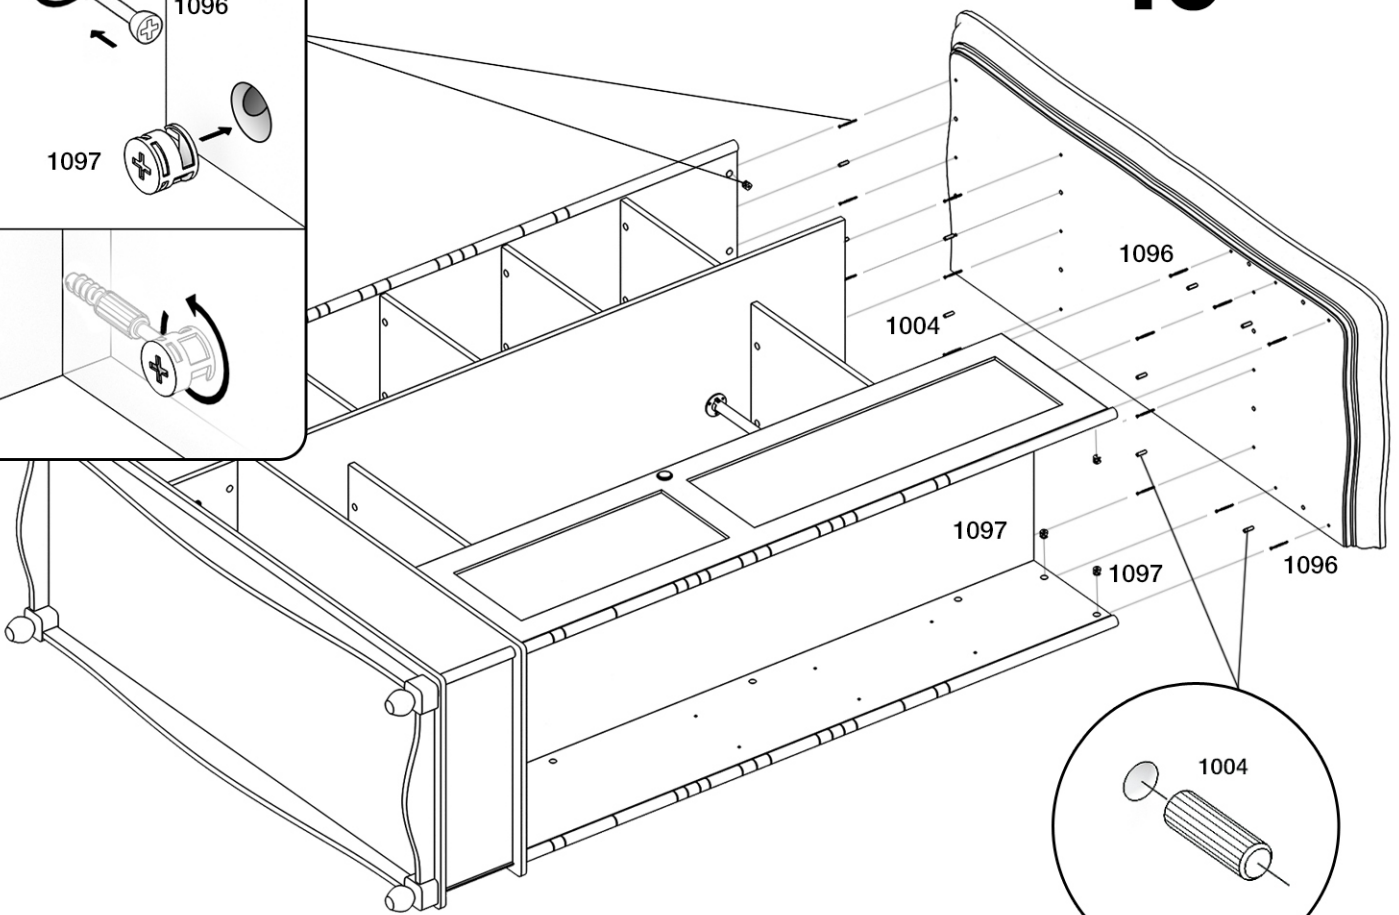


# 11

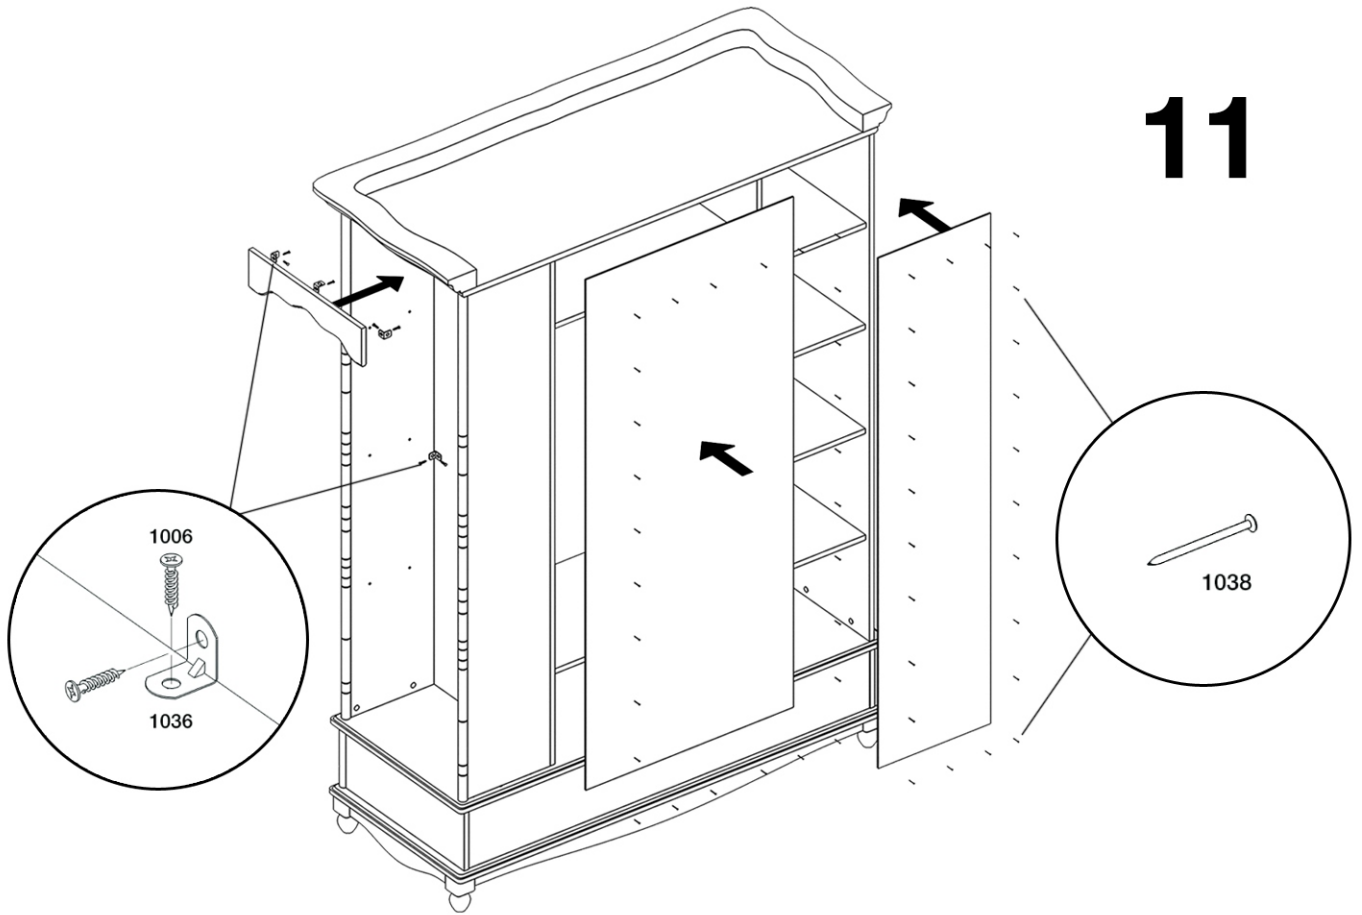

# 12

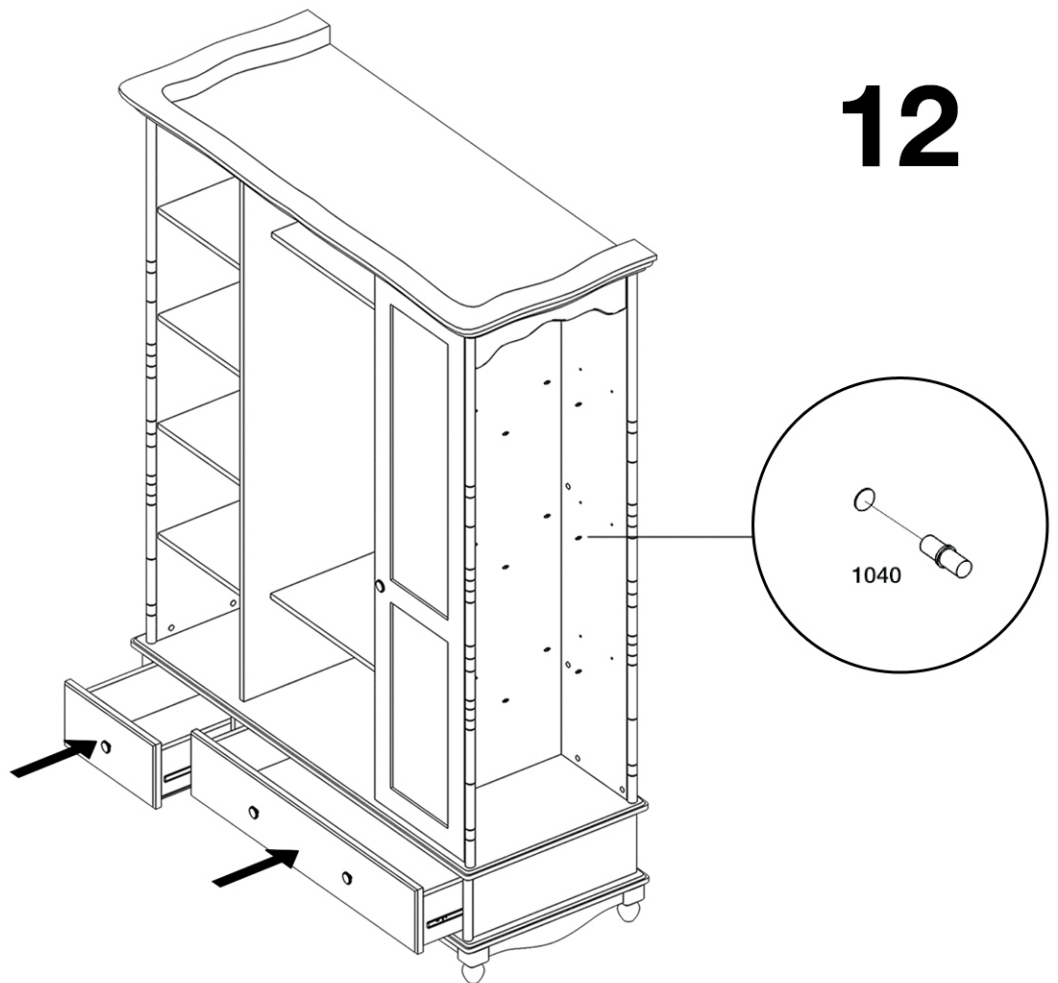



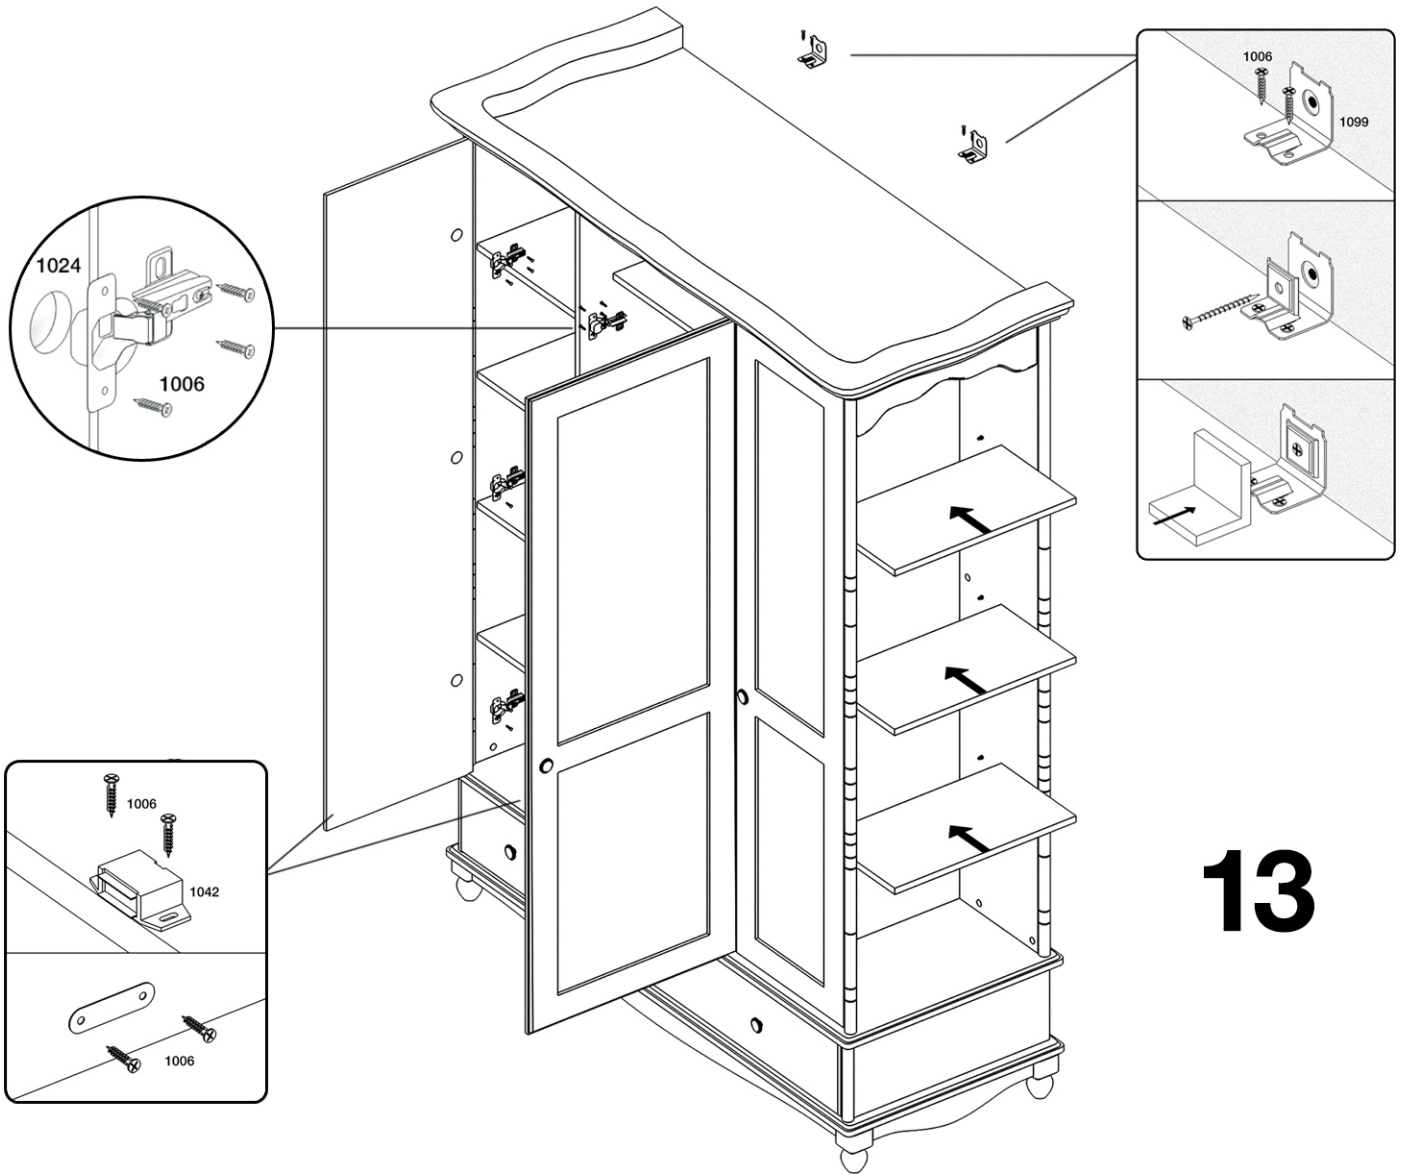

**13**

