


Ари-Прованс

Комод №21



 **TIMBERICA**

- RU** Инструкция по сборке
- EN** Assembly instruction
- FI** Koontaohje



1006
80



1008
20



1004
14



1096
42




1097
42




1038
44




1020
7




1039
20

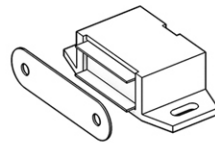

1042
2

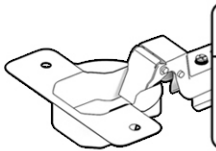


1024
4

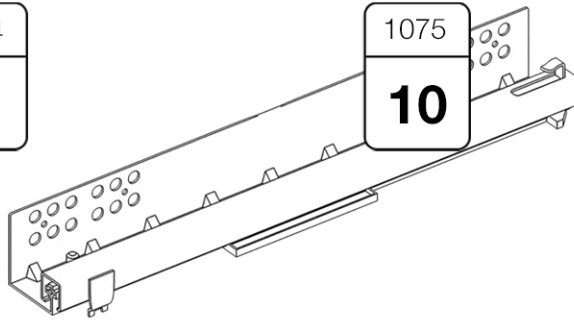

1075
10



1040
16

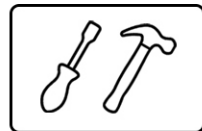

1

