

# АЙНО

Комод №11




 **TIMBERICA**

**RU** Инструкция по сборке

**EN** Assembly instruction


**FI** Koontaohje




1006  
**48**



1008  
**16**



1004  
**10**




1096  
**28**



1097  
**28**







1038  
**18**

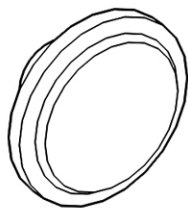


1074  
**7**

1048  
**4**

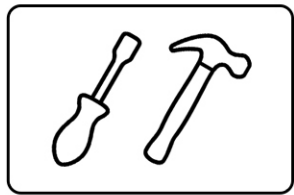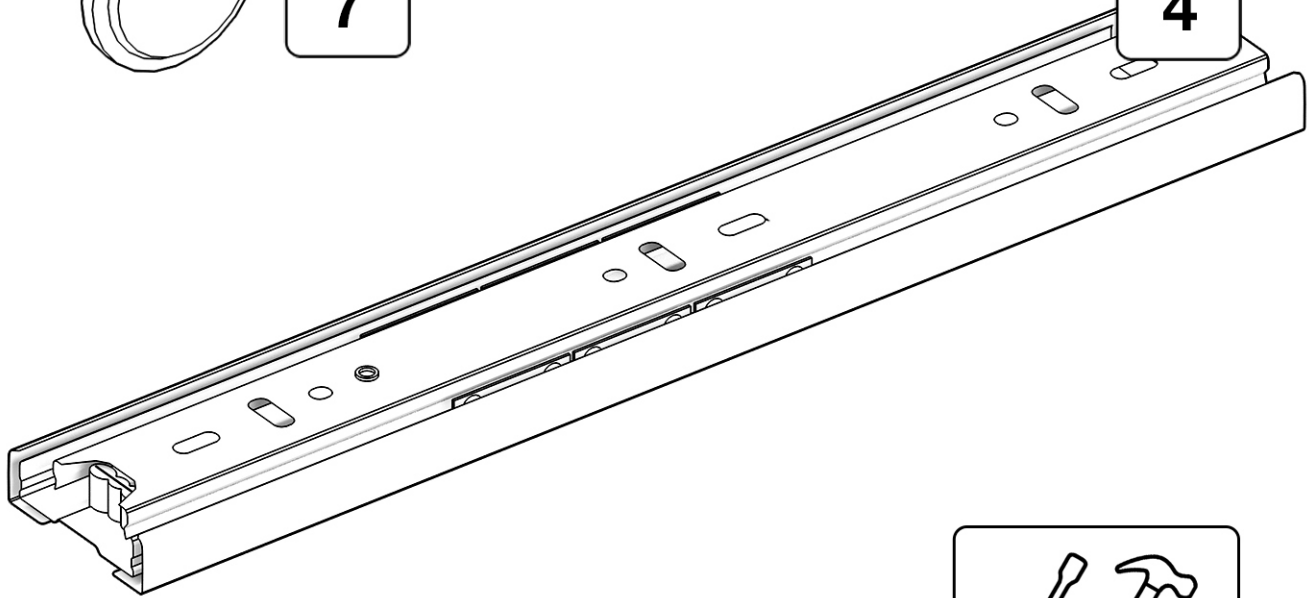

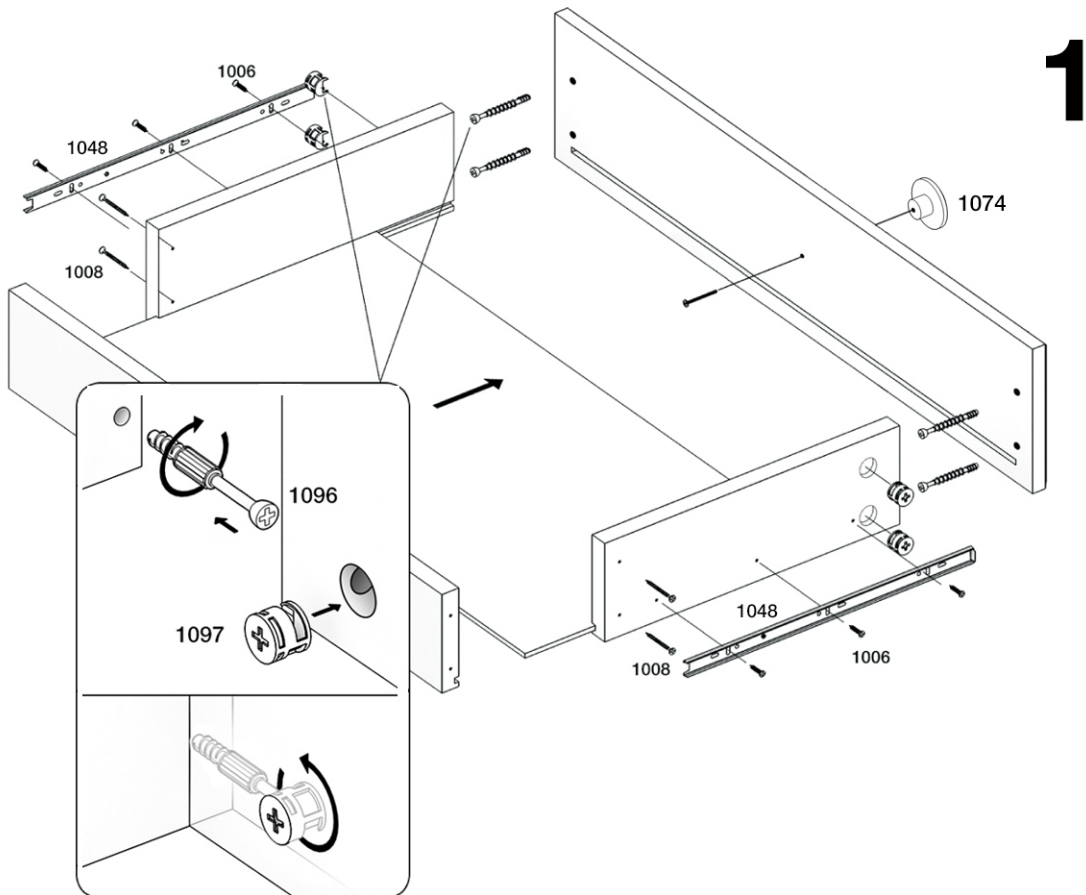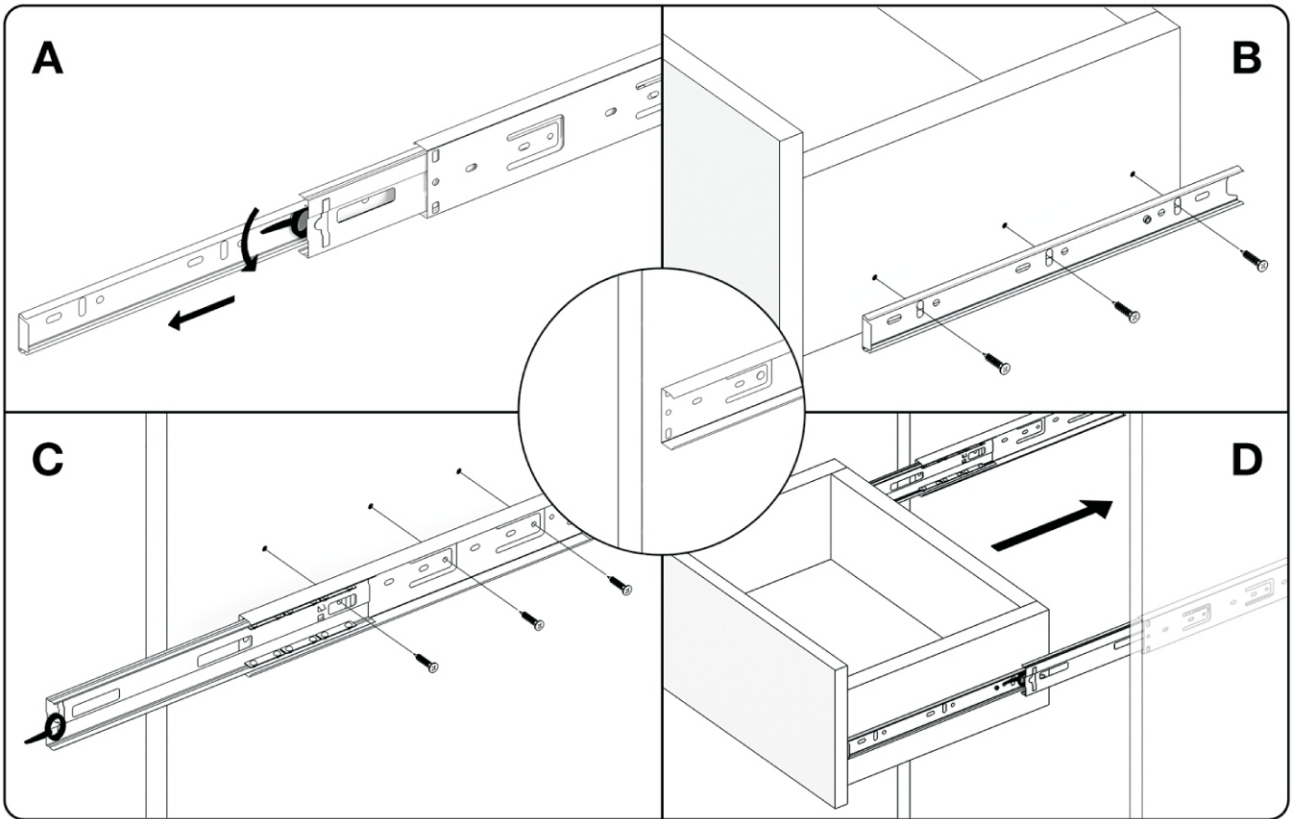

**1**

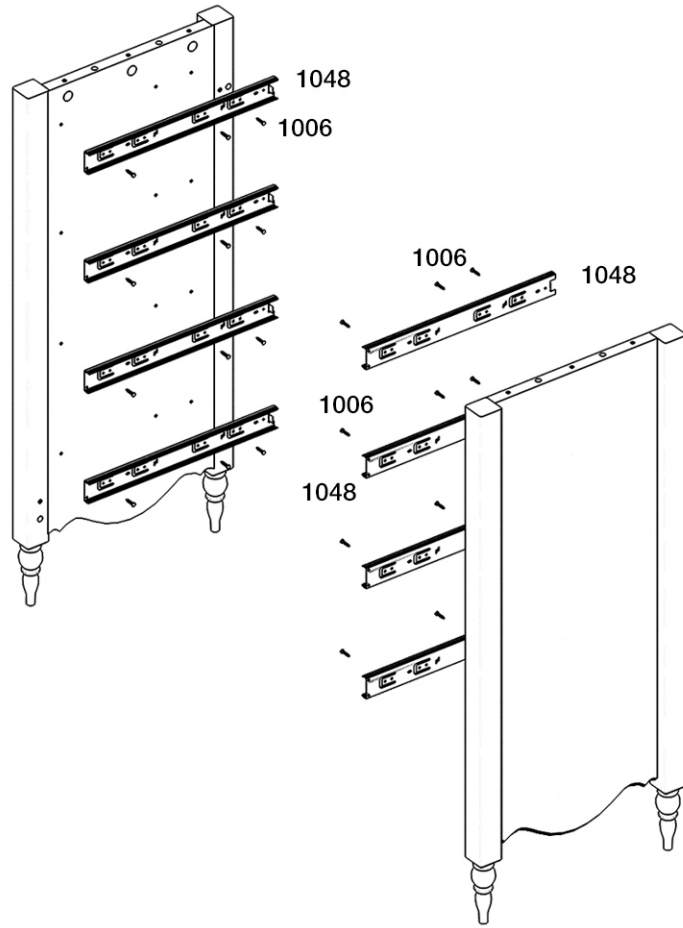

**2**

**3**

